



Owner's Manual



PLATINA BS VI



To keep your bike in perfect running condition, please follow the periodic maintenance services which includes **3 Free and subsequent Paid services**, as per the schedule contained in this booklet.

अपनी बाइक को सही चलती हालत में रखने के लिए, कृपया आवधिक रखरखाव सेवाओं का पालन करें जिसमें **3 नि:शुल्क और बाद में भुगतान सेवाएं शामिल हैं**, इस पुस्तिका में दिए गए अनुसूची के प्रति।

आपली बाईक परिपूर्ण स्थितीत चाळू ठेवण्यासाठी कृपया या बुकलेटमध्ये दिलेल्या शेड्यूलनुसार पीरिऑडिक मेन्टेनन्स सर्व्हिसेचे अनुकरण करा. **यात 3 फ्री आणि त्यानंतरच्या पेड सर्व्हिसेस समाविष्ट आहेत.**

ನಿಮ್ಮ ಬೈಕ್ ಸಂಪೂರ್ಣ ಚಾಲನಾ ಸ್ಥಿತಿಯಲ್ಲಿರಿಸಲು, ದಯವಿಟ್ಟು ಈ ಕೈಪಿಡಿಯಲ್ಲಿ ನಮೂದಿಸಲಾದ ಶೆಡ್ಯೂಲ್ ನಂತೆ ನಿಯತಕಾಲಿಕ ನಿರ್ವಹಣಾ ಸೇವೆಗಳನ್ನು ಅನುಸರಿಸಿ. ಇವು 3 ಉಚಿತ ಮತ್ತು ನಂತರ ಪಾವತಿ ಸೇವೆಗಳನ್ನು ಒಳಗೊಂಡಿರುತ್ತವೆ.

உங்களுடைய பைக்கை மிக நன்றாக ஓட்டும் நிலையில் வைத்திருப்பதற்கு, இந்தக் கையேட்டில் கொடுக்கப்பட்ட அட்டவணையில் உள்ளவாறு 3, லவச மற்றும் தொடர்ச்சியான கட்டண சேவைகளை உள்ளடக்கிய காலமுறை பராமரிப்பு சேவைகளை தயவு செய்து பின்பற்றவும்.

میں ہیکلے چکیٹی رننیوگ کونڈیشن لے کونڈیشنل بیک لٹلے کونڈیشنل پڑکاروں کڑموم تہسکونڈا میوونٹینسنس سہریس میوونڈونڈی، انڈولے **3 کسیت سہریسول، ۵ تہسکونڈا میوونڈ سہریسول کونڈا.**

നിങ്ങളുടെ ബൈക്ക് തികഞ്ഞ റണ്ണിംഗ് കണ്ടീഷനിൽ സംരക്ഷിക്കാനും സൗജന്യവും തുടർന്ന് പണം നൽകിയുള്ളതുമായ മെയ്റ്റ്‌നന്റ് സർവീസുകളുടെയവധായി സമയാസമയം ഈ ബുക്ലെറ്റിലെ ക്രമപട്ടികയിൽ കാണിച്ചുപ്രകാരം പാലിക്കുക.

आपनार बाईक निर्तूनभाव चालू अवस्था राखार जना, निर्दिष्ट समय अखर रक्षणारवेषण परिषेवा अनुसरण करण यार माथा आव्हे 3डि विनामूला एवऱ परवती मूलाभितिक परिषेवा, एहे मूखिकार अखरूळ तालिका अनुयायी।

ଆପଣାର ବାଇକକୁ ଉପଯୁକ୍ତ ରିନ୍ ଅବସ୍ଥାରେ ରଖିବା ପାଇଁ ପିରିଓଡିକ ମେନ୍ଟେନାନ୍ସ ସର୍ଭିସ୍‌ସ୍ ଅନୁସରଣ କରନ୍ତୁ ଯେଉଁଥିରେ ଅନ୍ତର୍ଭୁକ୍ତ ରହିଛି 3 ଟି ମାଗଣା ଓ ପରବର୍ତ୍ତୀ ପେଡ୍ ସର୍ଭିସ୍ ଯାହାର ସିଦ୍ଧୁଲ୍ ଏହି ବୁକ୍‌ଲେଟରେ ପ୍ରଦାନ କରାଯାଇଛି ।

तमारी बाइकने संपूर्ण चालू स्थितिमां राखवा माटे, कृपा करी नीचे मुजब समयांतरनी जलवण्णी सर्विसजं पालन करी जेमां **3 मुफ्त अने पछी यूडवण्णी सर्विसनी समावेश थाय छ**, आ पुस्तिकामां समाविष्ट समयक्रम मुजब

ਆਪਣੀ ਬਾਈਕ ਨੂੰ ਚਲਣੀ ਹਾਲਤ ਵਿੱਚ ਰਖਣ ਲਈ , ਕਿਰਪਾ ਆਵਰਤੀ-ਸੰਭਾਲ ਸੇਵਾ ਦਾ ਪਾਲਨ ਕਰੋ ਜਿਸ ਵਿੱਚ **3 ਮੁਫ਼ਤ ਅਤੇ ਬਾਦ ਵਿੱਚ ਭੁਗਤਾਨ ਸੇਵਾ ਸ਼ਾਮਲ ਹਨ**, ਇਸ ਕਿਤਾਬ ਵਿੱਚ ਦਿੱਤੇ ਗਏ ਅਨੁਸੂਚੀ ਦੇ ਪੁਤਿ।

ଆପୋନାର बाईकथन सठिकभारे चलि थका ह्छितत बाथिबले, अनुषह करि नियमौसा तद्वारथान सेवा अनुसरण करिब यत अखरूळ थके **3 टा विनामूलीया आक अब पिहव पविणोध कवा सेवा**, एहे पृथिकाथनत अखरूळ अनुसूची अनुयायी ।

اپنی بائیک کو بہترین رننگ حالت میں رکھنے کے لیے، برائے مہربانی وقت وقت سے مینٹیننس کی خدمات پر عمل کریں جس میں شامل ہیں: اس کتابچے میں دئے گئے وقت کے مطابق 3 مفت سروسز اور بعد کی پیڈ سروسز۔

Dear Customer,

Congratulations on becoming the proud owner of a **“Platina 100 BS VI / Platina 110 BS VI”**, one of the most value for money motorcycles in the country.

Your safety and the safety of others is extremely important. Hence, before you ride the bike, please read this Owner's Manual carefully and familiarize yourself with the operating mechanism, controls and maintenance requirements. This will ensure you a long and trouble free ownership experience.

To keep your bike in perfect running condition and deliver consistent performance, we have specially programmed the periodic maintenance services which includes 3 Free and subsequent Paid services. We earnestly advise you to avail all these services at any of our Vehicle Dealers or Authorised Service Dealers (ASD) as per the schedule contained in this booklet

Your **“Platina 100 BS VI / Platina 110 BS VI”** comes with a warranty of **5 Year or 75,000 km.** whichever occurs earlier from the date of sale. For details please refer to “Warranty: Scope & Limits” given in this manual.

We urge you to entrust all your service needs to a Bajaj Dealer or Authorised Service Centers only. They are well equipped with all necessary facilities / genuine parts / oil and trained manpower will ensure the best care for your bike.

Should you require any additional information feel free to contact us on our helpline number or e-mail us at: customerservice@bajajauto.co.in or visit the Bajaj Auto website www.bajajauto.com

Thank you for choosing a Bajaj “Platina” & wish you unlimited miles of happy riding!!

SERVICE DEPARTMENT

BAJAJ AUTO LIMITED

Description

| | |
|--|----|
| Technical Specifications..... | 1 |
| Identification Data..... | 4 |
| Location of Parts..... | 5 |
| Steering/Ignition lock, Fuel Tank Cap..... | 6 |
| Speedometer Details..... | 7 |
| Control Switches..... | 8 |
| Removal & Fitment of Side Cover..... | 10 |
| Removal & Fitment of Seat..... | 11 |
| Location of Battery / Tool kit / First Aid Kit.... | 12 |
| Daily Safety Checks..... | 13 |
| How to ride your Bike..... | 14 |
| Safe Riding Tips..... | 18 |
| Engine Oil..... | 19 |
| Wheels - Tyre & Instructions for customer..... | 20 |
| Periodic Maintenance Information..... | 21 |
| Combined Braking System (CBS)..... | 23 |
| Free Service Guidelines..... | 24 |
| E20 Petrol / USB Charger..... | 25 |
| Vehicle Cleaning and Washing Care..... | 26 |
| Periodic Maintenance & Lubrication Chart..... | 28 |
| Non Use Maintenance..... | 36 |
| Delivery Certificate..... | 37 |
| Warranty Scope & Limit..... | 38 |
| Battery Warranty Card | |

Safety and Warning information :



Warning : This indicates that a potential hazard or injury to you or other persons & to the vehicle can happen if advice provided is not followed.



Caution : This indicates that a potential hazard that could result in vehicle damage. Follow the Advice provided with the caution.

Notice:

The description and illustration in this booklet are not to be taken as binding on the manufacturers. The essential features of the type described and illustrated herein remaining unaltered. Bajaj Auto Limited reserves the right to carry out at any moment without being obliged to bring this booklet upto-date & to do modifications on the vehicle, parts or accessories as may be convenient and necessary.

Technical Specifications

PLATINA

| Parameter | Platina 100 Drum ES & KS 4 Speed | Platina 110 Drum-Drum 4 Speed |
|-----------------|----------------------------------|-------------------------------|
| Engine | 4 stroke, Natural air cooled | 4 stroke, Natural air cooled |
| Bore x Stroke | 47 mm x 57.4 mm | 50 mm x 58.6 mm |
| Displacement | 99.59 cc | 115.06 cc |
| Idling Speed | 1400±100 rpm | 1400±100 rpm |
| Max. Net Power | 6.03 kW (8.2 PS) @ 7500 rpm | 6.99 kW (9.5 PS) @ 7500 rpm |
| Max. Net Torque | 8.34 Nm @ 5500 rpm | 9.9 Nm @ 5500 rpm |
| Ignition System | DC | DC |
| Fuel System | Fuel Injection System | Fuel Injection System |
| Starting Aid | Kick & Self (ES version) | Kick & Self (ES Version) |
| Spark Plug | 1 no. | 1 no. |
| Spark Plug Gap | 0.7 to 0.8 mm | 0.7 to 0.8 mm |
| Transmission | 4 Speed (All down) | 4 Speed (All down) |
| Lubrication | Forced Lubrication | Forced Lubrication |
| Front Brake | Drum | Drum |
| Rear Brake | Drum | Drum |
| Tyre Front | 2.75 X 17, 41P | 80/100-17, 46P, Tubeless |
| Tyre Rear | 3 X 17, 50P | 80/100-17, 53P, Tubeless |

Technical Specifications

PLATINA

| Parameter | | Platina 100 Drum ES & KS 4 Speed | Platina 110 Drum-Drum 4 Speed |
|---------------------|------------------|-----------------------------------|-----------------------------------|
| Tyre Pressure | Front | 1.75 kgf/cm ² (25 PSI) | 1.75 kgf/cm ² (25 PSI) |
| | Rear (Solo) | 2 kgf/cm ² (28 PSI) | 2 kgf/cm ² (28 PSI) |
| | Rear (Pillion) | 2.25 kgf/cm ² (32 PSI) | 2.25 kgf/cm ² (32 PSI) |
| Dimensions | Length | 2004 mm | 2004 mm |
| | Width | 705 mm | 705 mm |
| | Height | 1102 mm | 1102 mm |
| | Wheel base | 1250 mm | 1250 mm |
| | Ground Clearance | 200 mm | 200 mm |
| Fuel Tank - Full | 11 L | 11 L | |
| Electrical System | DC | DC | |
| Head Lamp | 35/35W | 35/35W | |
| Position Lamp | DRL | DRL | |
| Tail Lamp/Stop Lamp | 5/10W | 5/10W | |
| Side Indicator | 10W - 4 nos | 10W - 4 nos | |
| Horn | 12 V, 2A | 12 V, 2A | |

| Parameter | Platina 100 Drum ES & KS 4 Speed | Platina 110 Drum-Drum 4 Speed |
|-----------------------|----------------------------------|-------------------------------|
| Neutral Indicator | 2W (Green) | 2W (Green) |
| Turn Signal Indicator | 2W (Green) | 2W (Green) |
| Hi-Beam Indicator | 2W (Blue) | 2W (Blue) |
| Speedometer Lamp | 2W - 2 nos | 2W - 2 nos |
| Malfunction Indicator | 2W (Amber) | 2W (Amber) |
| Battery | 12 V 4 Ah VRLA | 12 V 4 Ah VRLA |
| Vehicle Kerb Weight | 113.4 kg. | 116 kg. |
| Vehicle Gross Weight | 243.4 kg. | 246 kg. |

Note :

- All dimensions are under UNLADEN condition.
- Above information is subject to change without any notice.
- This vehicle complies to BS VI standards.
- Day Time Running Light (DRL) is as per Government regulation.

Identification Data- (Frame Number & Engine Number)

PLATINA

The Frame and Engine serial numbers are used to register the motorcycle. They are the unique alpha-numeric codes to identify your particular vehicle from others of the same model and type.



Frame Number Location

On Side of Steering Tube
(Alpha-Numeric - 17 Digits)

Engine Number Location

On LH Side Crankcase Near Gear Change
Lever (Alpha-Numeric - 11 Digits)



Location of Parts

PLATINA





Steering cum Ignition Lock :

It has three positions.

| | |
|---|---|
| ● | LOCK: Steering locked. Ignition OFF. |
| ⊗ | OFF: Steering unlock. Ignition OFF. |
| ⊙ | ON: Steering unlock. Ignition ON. |

Key : A common key is used for 'Steering cum Ignition lock', 'Fuel tank cap' & 'Side cover RH lock'.


To Lock the Steering : To lock the steering, turn the handle bar to the left or right. Push the key inside & turn toward 'LOCK' position. Match the lock position & turn key to 'LOCK' position. Lock the steering & remove the key.

To Unlock the Steering : To unlock steering, insert the key in steering cum ignition lock & turn it clockwise to "OFF" or "ON" position.




Fuel Tank Cap

- To open : Insert the key in the lock and turn it clockwise and lift fuel tank cap.
- 'Fuel Tank Cap' gets locked when pushed back into the place.
- Don't attach metallic 'Key chain' as it may damage paint of petrol tank.

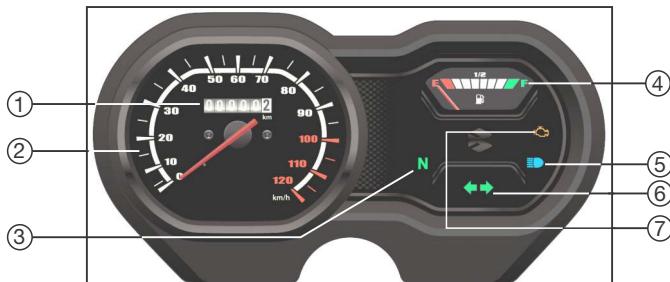

1. **Odometer** : The Odometer shows the total distance that the vehicle has accumulated.
2. **Speedometer** : The Speedometer pointer shows the speed of vehicle.
3. **Neutral Indicator (N Green)** : When the transmission is in Neutral & Ignition switch 'ON', the Neutral indicator will get 'ON'.
4. **Fuel Level Indicator** : Fuel level indicator shows approximate available fuel in fuel tank.
5. **Hi Beam Indicator (☹️ Blue)** : When Headlight is 'ON' & Hi beam is selected, Hi beam indicator will get 'ON'.
6. **Turn Signal Indicator (↔️ Green)** : When Turn signal switch is turned to Left or Right, Turn pilot indicator - LH or RH will flash.
7. **Malfunction Indicator (🚩 Amber)** : It glows whenever any abnormality is noticed in functioning of Ignition / BS VI carburettor components.

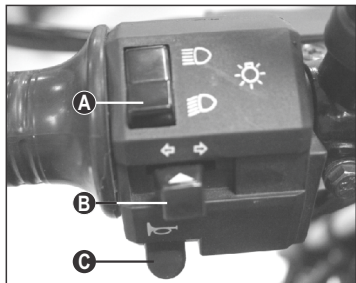


Left Handle Bar Switches

A. Hi / Lo Beam Switch : When headlight is ON, High or Low beam can be selected with the Hi / Lo switch. Hi beam indicator light in speedo console will glow when high beam is selected.

☰○ : High Beam ☷○ : Low beam


B. Turn Signal Switch: When the turn signal switch is turned to Left (↶) or Right (↷), corresponding turn signals flash on & off.

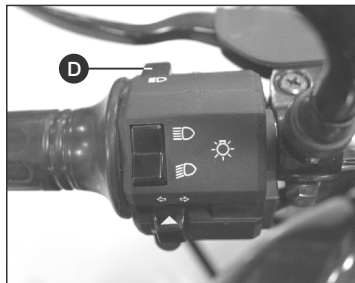

To stop flashing, press the switch IN.

C. Horn Switch : (📄) Press horn switch for sounding horn.

D. Pass Switch : (☷○) Press the switch to flash the head light in hi beam mode. It is used to give signal to vehicles coming from opposite side while overtaking.

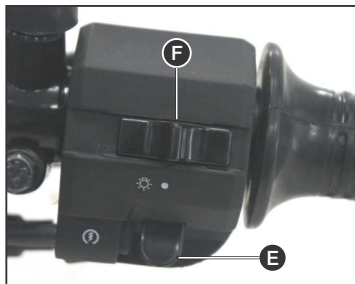

Right Handle Bar Switch

E. Starter Button : It operates the electric starter when clutch lever is pressed with transmission in any gear. It is recommended to start engine with transmission in neutral (applicable for electric start vehicle only).

F. Head Light Switch : It has 2 positions.

● : All lamps 'OFF'. DRL ON (High Intensity)

☀ : Head lamp, Tail lamp, & Speedometer lamps will glow. DRL remains ON (Low intensity)


Day Time Running Light Feature :

- Day Running light is provided above headlamp. (as applicable to model)
- Day running light gets ON (High intensity) when ignition switch turned to ON position.
- After headlight is turned to ON position, intensity of DRL LED's will get reduced.

Day Time Running Light (DRL)



| Ignition Switch | Light Switch | DRL | Head Light |
|-----------------|--------------|-------------------|------------|
| ON | OFF | ON High Intensity | OFF |
| ON | ON | ON Low Intensity | ON |

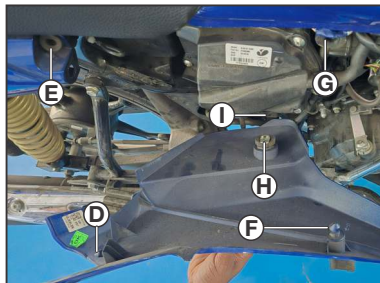

Removal of Side Cover RH

- Insert the key into the cover lock (A) and turn the key clockwise.
- Hold cover with both hands & pull front side first (B) & Slide rear side (C) towards front wheel side.
- Take out 'Side cover'.



CAUTION : Remove side cover as described above, Otherwise the lugs may break.

Fitment of Side Cover RH

- Match rear side (D) of 'Side Cover' lug with hole (E) provided on 'Seat Cowl' & slide 'Side Cover'.
- Match Lug (F) provided on front side of 'Side Cover' with hole provided on 'Fuel Tank' (G) and press 'Side Cover' inside.
- Match the 'Side Cover' lock (H) properly with hole provided on 'Chassis' (I) & Lock (A) the 'Side Cover'.



CAUTION : Fit side cover as described above to ensure proper fitment.



Fig. A

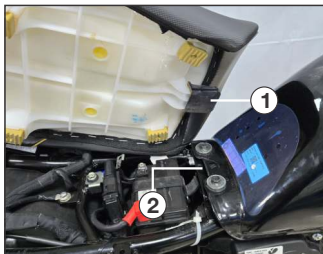


Fig. B

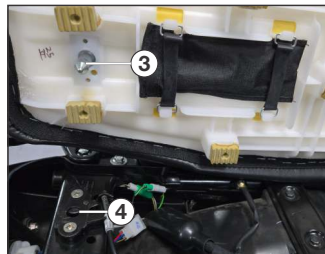


Fig. C

Removal of Seat

- Remove 'Side Cover' RH.
- Pull the 'Seat Release Cable' (A) to release seat lock.
- Keeping cable pulled, lift the seat from rear end and slide it towards tail lamp to remove it.


Fitment of Seat

- Match & insert the bracket ('1' of Fig. 'B') of seat with slot ('2' of Fig. 'B') provided below fuel tank rear mounting on chassis.
- Push seat towards fuel tank and align lock rod ('3' of Fig.'C') & seat lock ('4' of Fig. 'C').
- Then press the seat in middle from top to lock it.



Battery

- It is located below seat assembly.
- Make of battery may be differ from vehicle to vehicle.

 **CAUTION** : Do not drive/run vehicle in battery disconnected condition. It may lead to damage of electrical / electronic components.




Tool Kit

- It is clamped below seat by rubber strap.
- A rubber strap is provided to hold tool kit.

First Aid Kit

- It is located below seat on rear fender as shown in figure.

 **CAUTION** : Always fit rubber strap to hold the tool kit securely. Loose tool kit would cause rattling noise.



Before riding motorcycle be sure to check following items. Please give proper importance to these checks and perform all of them before riding motorcycle.

If any irregularities are found during these checks, refer to the Maintenance chapter & see your dealer for the action required to return the motorcycle to a safe operating condition.



Warning : Failure to perform these checks every day before you ride may result in serious damage or severe accident.

- Enough **fuel level** for planned distance of journey. No fuel leakage in fuel lines.
- **Engine oil** level (between upper and lower level mark)
- **Throttle cable** free play of 2 to 3 mm. Smooth operation and positive return to closed position.
- **Front brake lever** free play - 2 to 3 mm. applicable for drum brake vehicles, Not applicable for disc brake vehicles.
- **Rear brake pedal** free play- 20 to 30 mm.
- **Wear lining Indicator** within usable range. No brake dragging, applicable to drum brake vehicles.
- **Drive Chain** slack of 20 to 30 mm adequately lubricated.
- Function of all **lights & horn**
- **Clutch lever** free play - 2 to 3 mm
- Smooth **steering movement** without restriction.
- Both **stand** return to their fully up position.
- Correct **inflation pressure** in both tyres Adequate tyre tread depth - no cracks / cuts.
- Correct **rear viewing** span adjustment of mirror.

Starting The Engine :

- Switch 'ON' engine.
- Confirm that transmission is in neutral.
- Keep throttle completely closed, press starter button to start the engine.
- Release starter button as soon as engine starts.

Moving Off :

- Check that center / side stand is up.
- De-press the clutch lever.
- Shift into 1st gear.
- Open the throttle and release the clutch lever slowly and simultaneously.
- As the clutch starts to engage, open the throttle a little more, giving the engine just enough rpm to keep it from stalling.


Side stand down condition is interlocked as given below.

| Condition | Result |
|-----------------|--|
| Vehicle in 'N' | Self start / kick start possible but as soon as vehicle is put in gear, engine will get cut off. |
| Vehicle in Gear | Engine will not start by self / kick. |

Shifting Gears :

- Close throttle & press the clutch.
- Shift into next higher or lower gear.
- Open the throttle and release the clutch lever slowly and simultaneously.

Gear Shifting Pattern

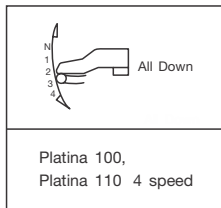


Gear Shifting Lever



Recommended Speed for Shifting Down-

| Gear | Speed |
|--|--------------|
| From 4 th to 3 rd Gear | 24 ~ 30 km/h |
| From 3 rd to 2 nd Gear | 18 ~ 23 km/h |
| From 2 nd to 1 st Gear | 13 ~ 16 km/h |

 **Warning** : When shifting down to lower gear, do not shift at such high speed that engine rpm jumps excessively. This may cause engine damage, & rear wheel may skid. Downshifting should be done at recommended speeds as shown in table.

Braking :


- Close the throttle completely, leaving the clutch engaged (except where shifting gears) so that the engine braking will help slow down the motorcycle.
- Shift down one gear at a time so that you are in Neutral when you come to a complete stop.
- When stopping, always apply both brakes at the same time. De-clutch as necessary to avoid engine stalling.
- Never lock the brakes, or it will cause the tyres to skid. When cornering, use brakes judiciously & do not de-clutch. Reduce your speed before you get into the corner. For emergency braking, disregard downshifting, and concentrate on applying brakes as hard as possible without skidding.

Stopping the Vehicle :

- Close the throttle completely.
- Shift the transmission into neutral.
- Bring the vehicle to complete stop.
- Turn the ignition switch off.

Parking the Vehicle :

- Support the motorcycle on a firm level surface with the center or side stand.
- Lock the steering.

 **CAUTION** : Do not park on a soft or steeply inclined surface or the motorcycle may fall over.

Running IN

Proper running-in is important for the better life & trouble free performance of the vehicle.

- During first 2000 km running-in period do not exceed following speed limits.

| km | 1st | 2nd | 3rd | 4th |
|-------------|-----|-----|-----|-----|
| 0 - 1000 | 10 | 20 | 30 | 40 |
| 1000 - 2000 | 15 | 30 | 40 | 45 |

- Always keep the speed below the limits mentioned in the table.
- Do not race the engine excessively.
- Do not start moving or race the engine immediately after starting. Run the engine for a minute at idle speed to give the oil a chance to workup into the engine.

Fuel Saving Tips :

A well maintained vehicle and good driving can contribute a lot to the saving of petrol.

- Ride smoothly and steadily at an optimum driving speed of 40 to 50 Km/h to get best mileage.
- Avoid harsh braking.
- Change the gear judiciously according to the speed and load requirement.
- Don't overload the vehicle above the specified payload.
- Use the accelerator judiciously. For maximum life of engine, never use hard acceleration when engine is cold
- Cut off the engine if you want to stop for more than two minutes.
- In cold condition, kick start to be preferred for longer one way clutch life

How to check mileage (Fuel efficiency)

Best way to calculate mileage is by following the full tank to full tank method.

- Fill way tank full up to small mouth (brim).
- Run the bike for say 100 km.
- Fill the tank full again in same fuel filling station, probably with same fuel dispenser.
- Divide kilometer run / fuel quantity filled.

Optimum shifting speeds for best mileage.

| Gears | Platina 100/ 110 |
|----------|------------------|
| 1st gear | 0 km/h |
| 2nd gear | 16 ~ 20 km/h |
| 3rd gear | 25 ~ 35 km/h |
| 4th gear | 35 ~ 45 km/h |

Ensure following maintenance points to get optimum performance from your bike.

| | |
|-------------------|---|
| Fuel | Check fuel lines & connections for leakage. |
| Spark Plug | Inspect and clean spark plug. Adjust electrode gap. Replace spark plug as per P.M. Chart. |
| Air Filter | Clean air filter element periodically. Replace as per Periodic Maintenance Chart. |
| Engine Oil | Check engine oil level. Always use recommended grade and quantity. |
| Brakes | Ensure that the brakes are not dragging / binding. |
| Clutch | Ensure correct clutch lever play. |
| Tyre Air Pressure | Always maintain recommended tyre pressure. |

- Always wear Helmet while driving or riding. Your helmet should conform to Indian standards.
- Read thoroughly the instructions given in this manual and follow them carefully.
- Avoid unnecessary accessories for the safety of both rider and other motorists.
- Get familiar and follow traffic rules & regulations in your states as well as general traffic signs.
- Familiarise yourself well with starting, acceleration and braking of the vehicle.
- When applying the brakes, use both front & rear brakes simultaneously. Applying only one brake may cause the vehicle to lose control.
- Riding at proper speed, avoiding unnecessary acceleration and braking are important for safety, low fuel consumption and longer life of the vehicle.
- During monsoon, drive vehicle more cautiously. Remember vehicle skid more easily during light showers.
- Keep both hands firmly on handle bar & both feet securely on rider footrest. Do not take away both hands & / or feet from resting area as this is very unsafe.
- Do not use mobile phones while riding as it could lead to fatal accident.
- It is suggested to customer to take appropriate care in area of heavy monsoon or high rainfall area. The appropriate surface preventive coat to avoid rusting / poor surface finish on account of adverse atmospheric conditions.
- Always carry vehicle registration & insurance papers, and a valid driving licence with you.

General Maintenance Tips :

- Vehicle cleaning to be done with soft & clean wet cloth to avoid scratches on painted parts.
- Clean & lubricate all the important parts as detailed in a periodic maintenance chart.
- Do not apply direct water jet on painted, electrical / electronic parts.
- Do not obstruct engine cooling by adding mud protection sheet from front
- Drive cautiously. Start early & reach your destination safely.
- Avoid driving on loose sand or stones where vehicle is likely to skid.
- Properly wrap-up loose clothes while driving or riding to avoid entangling in wheel or other objects on road.
- Always concentrate on riding for safety.



A: Oil Filler Cap



Engine Oil Level Checking :

- Idle the engine for 2~3 minutes if engine is cold.
- Switch off engine and wait for 2~3 minutes.
- Park the vehicle on level surface to check oil level.
- Park on center stand.
- Remove dipstick and wipe it clean.
- Insert dipstick until it touches clutch cover surface. Do not screw it.
- Remove dipstick and check oil level.
- Oil level should be between 'H' & 'L' mark as per image.

Engine oil capacity:

- Refill at servicing : 1000 ml
- During engine overhaul : 1100 ml

Recommended Engine Oil:

Always insist on Bajaj Genuine Engine Oil for optimum engine performance and warranty benefits. It is a specially formulated oil for vehicles with BAL engines.

| Model | Recommended engine oil | Grade |
|---------|--------------------------------------|----------------------------------|
| Platina | Bajaj 10000 BS6 Compliant | 10W30 JASO MA2 API SN |

- Engine oil replacement frequency : 1st service & then every 10,000 km.
- Engine oil level top-up frequency : Every 5000 km.
- For all BS6 vehicles, BS6 compliant engine oil is to be used only. Use of BS6 compliant engine oil will give prolonged life of catalytic converter.



CAUTION :

- It is most important to adhere to recommended grade & frequency of oil change for the purpose of long life of critical engine components. For details refer periodic maintenance chart.
- Do not reuse drained oil.



Use the recommended levers while removing the Tyre / Tube for puncture work. This will avoid any damages to the edges / scratches on paint of the wheel.

Tyre Pressure :

Keep recommended tyre pressure (as per technical specifications) to increase life of the tyre & for better fuel consumption.

Note : In case motorcycle is fitted with imported tyres. compliance to respective indian standard & central motor vehicle rules has been ensured.

- Tyre warranty is settled by tyre manufacturer.
- Decision is taken based on tyre wear & running of vehicle. BAL settles tyre warranty only for imported tyres.

Instructions for Customer

- There is no fuel cock.
- Always maintain minimum 3 liter petrol in fuel tank.
- Do Not rev engine in standstill condition.
- Don't use adulterated fuel as it will result in rusting & clogging of engine parts.
- Never drive by disconnecting wheel speed sensor.
- Cleaning cloth to be strapped along with toolkit under seat asy as shown in image.
- Do not keep cleaning cloth in the vicinity of high temperature zone e.g. Engine, Silencer assembly, Catalytic convertor, Starter motor, etc.





4 Ah VRLA Battery

Battery :

- Battery is located below seat assembly.
- Warranty on Battery from the date of purchase of vehicle.
12 V 4 Ah VRLA : 18 months
- Battery make may be differ on vehicle to vehicle.

12 V 4Ah VRLA - Battery Features

- No topping-up is required
- Reduced self discharge, Enhance safety.
- No vent tube open to atmosphere hence no discharge of electrolyte through vent tube.


- When battery is found discharged, it is advised to get it charged immediately.
- Environment care must be taken to dispose off used battery. It is always recommended to hand over the same to Authorised battery / Bajaj dealer for proper disposal.

How to keep battery healthy ?

- Switch 'Off' ignition when engine is not running. Get battery checked / charged during periodic services.
- **Do not add extra electrical accessories such as-Remote, bigger horn, musical brake light etc. This will reduce the life of battery**
- If vehicle is to be stored for more than 2 weeks disconnect battery to avoids self discharge.



CAUTION : While disconnecting always disconnect negative (-ve) cable first. While refitting always connect positive (+ve) cable first.

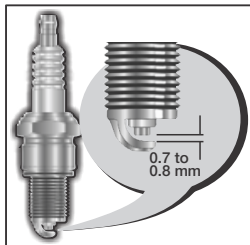

Spark Plug

- Remove spark plug by using plug spanner.
- Clean spark plug.
- Adjust the gap if incorrect by bending outer electrode carefully.



Drive Chain Cleaning



Drive Chain Lubrication

Drive Chain Slackness


- Chain top edge to be kept between two marks during chain slackness adjustment.
- Chain slackness to be adjusted whenever required.
- Std. Chain slackness : 20 ~ 30 mm
- Marking on chain adjusters should be identically positioned on both sides.



Drive chain must be cleaned & lubricated as per periodic maintenance schedule.

Drive Chain (Non sealed type)

- Non sealed type chain should be removed & cleaned by Nylon brush & Kerosene / diesel in chain cleaning stand.
- It should be lubricated by SAE 90 grade oil.

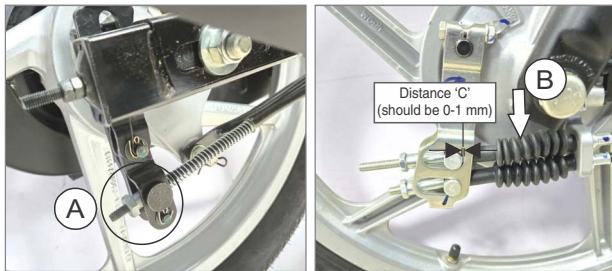

CBS Working :

- When front brake lever is pressed, then only front brake will get applied.
- When Rear brake pedal is pressed then both Rear and Front brakes will get applied, however it is recommended to use both brakes simultaneously for best braking performance

Brake setting guideline in case rear wheel puncture and repair done at road side garage.

- Adjust rear brake free play by tightening nut (A). After adjustment ensure gap between CBS front brake cable (B) sleeve & cam lever slot (Distance C).
- It is recommended to do setting as per guideline mentioned at BAL authorised dealership after rear / front wheel puncture, rear / front brake shoe replacement, CBS cable replacement, higher brake free play at rear / front, chain play adjustment, tyre refitting, etc.

Note : For CBS setting bring the vehicle to BAL authorised workshop only.

Instruction to avail Free Service through Digitized Free Service Coupon

Please follow following procedure : -

- Please provide your mobile number to Dealer at the time of buying of new Bajaj Vehicle.
- In case of change in mobile number, please update to Dealer / ASD.
- When you are at Dealership / ASD workshop for availing Free Service, you will receive the 'Unique Coupon Number' (UCN) through SMS in your mobile.
- Please inform the UCN to Dealer / ASD at the time of Free Service.
(ASD-Authorised Service Dealer)

| Periodic Service Criteria | | | |
|---------------------------|----------------------------|--------------------------------------|--------------------------|
| Service | Days | km | |
| 1st Free Service | 30~45 | 500~750 | whichever occurs earlier |
| 2nd Free Service | 240 | 4500~5000 | |
| 3rd Free Service | 360 | 9500~10000 | |
| Subsequent Paid services | 120 Days from last Service | Every 5000 km after previous service | |

Availing all Free / Paid Services, replacing mandatory periodic parts & engine oil will entitle warranty eligibility.



E20 :

- This vehicle is compatible for “E20” Petrol i.e. Petrol blended with 20% Ethanol. E20 sticker affixed on fuel tank cap.
- In this vehicle ‘E10’ Petrol (existing) i.e. Petrol blended with 10% Ethanol also can be filled.



USB CHARGER :

- USB mobile charging socket has been provided on instrument cluster flap.
- The charger socket has been provided with cap to protect charger socket from dust and water entry during washing/ rain.
- Always ensure charger cap is firmly fitted on socket when charger socket is not in use.
- The mobile charger will supply output voltage only in engine running condition.
- Customer to use suitable USB cable for mobile charging.



CAUTION : Do not use mobile phone while driving. Momentary lapse in concentration might result in an accident.

Regular cleaning not only enhances the appearance of your motorcycle but also plays a crucial role in maintaining its performance and extending its life by preventing rust, corrosion, and premature wear. We recommend following the guidelines below:

Washing Preparation:

- Ensure the engine and all hot components have completely cooled.
- Cover sensitive parts such as the muffler tail end, speedometer, headlamp, tail lamp, Indicators and control switches to prevent water entry and avoid damage or fogging.

Washing Instructions:

- Rinse the vehicle with clean water using a low-pressure spray to remove loose dirt and debris.
- Avoid spraying water directly on electrical, electronic components, the Oil cooler, lights, switches, or the muffler.
- Use a neutral pH bike cleaner; avoid harsh chemicals or household cleaning agents.
- Clean surfaces gently with a sponge or soft brush to prevent scratches.
- Rinse and wipe using a clean microfiber cloth, followed by thorough drying with low air pressure.
- Ensure all electrical connections are clean and moisture-free.
- Lubricate the drive chain and other moving parts after washing and drying.

Important Do's & Don'ts:

- Recommended washing pressure is up to 20 bar; maintain a 2-meter distance and avoid directing the jet at any spot for more than 10 seconds to prevent damage to electrical components like LCDs, LEDs, and other sensitive parts.
- Do not spray water into the air cleaner or throttle body, as it may cause starting issues.
- Avoid removing the seat or any other components during pressure washing to prevent water ingress.
- After washing, gently apply brakes at low speed to dry them; clean brake discs or pads if necessary.
- For matte-painted surfaces, avoid using wax or polish. Instead, clean with mild detergent and a soft cloth.



Note : Headlight lenses may temporarily fog up after washing or riding in the rain. This is normal and does not affect functionality. However, if the moisture/water accumulation is high, please visit the nearest BAL dealer for vehicle inspection.

Following these simple steps will help keep your motorcycle in excellent condition and ensure its reliable performance.

Periodic Maintenance & Lubrication Chart

| Sr. No. | Activities / Check Points | Recommended Frequency - Service Interval & km | | | | | | | |
|---------|---|---|------------|--------------|---------------|----------------|----------------|----------------|----------------|
| | | Servicing | 1st (Free) | 2nd (Free) | 3rd (Free) | 4th | 5th | 6th | 7th |
| | | km | 500 750 | 4500 5000 | 9500 10000 | 14500 15000 | 19500 20000 | 24500 25000 | 29500 30000 |
| 1. | Servicing with water wash | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 2. | Engine oil (Bajaj 10000 oil) | Top-up,R | R | Top-up | R | Top-up | R | Top-up | R |
| 3. | Centrifugal oil filter | CL | CL | | CL | | CL | | CL |
| 4. | Oil strainer | CL | CL | | CL | | CL | | CL |
| 5. | Air cleaner element** & air filter cover 'O' ring | R | | | | R | | | R |
| 6. | Air filter assembly drain tube. | CL,R | CL | CL | CL | R | CL | CL | R |
| 7. | Breather foam filter | R | | | | R | | | R |
| 8. | Fuel pipes for cracks. | C,R | C | C | C | R | C | C | R |
| 9. | Spark plug clean & check gap | CL,A,R | | | CL,A | | CL,A | | R |
| 10. | Valve tappet clearance | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |
| 11. | Engine breather tube for cracks. | C,R | | | C,R | C,R | C,R | C,R | C,R |

Periodic Maintenance & Lubrication Chart

| Recommended Frequency - Service Interval & km | | | | | | | | | Remarks |
|---|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|---|
| 8th | 9th | 10th | 11th | 12th | 13th | 14th | 15th | 16th | |
| 34500 35000 | 39500 40000 | 44500 45000 | 49500 50000 | 54500 55000 | 59500 60000 | 64500 65000 | 69500 70000 | 74500 75000 | |
| ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | Ensure to prevent water entry in Petrol tank, Silencer & electrical parts. Use caustic free solution for washing. |
| Top-up | R | Top-up | R | Top-up | R | Top-up | R | Top-up | Use BGO 10W30 BS6 compatible. Replace engine oil in 1st service and at every 10,000 km. |
| | CL | | CL | | CL | | CL | | Body centrifugal filter cleaning to be done at 1st service and then at every 10,000 km. |
| | CL | | CL | | CL | | CL | | Oil strainer cleaning at the time of oil change. |
| | | R | | | R | | | R | Replace Air filter element at every 15,000 km. Replace air filter cover O ring along with filter element. |
| CL | CL | R | CL | CL | R | CL | CL | R | Replace Drain tube at every 15,000 km. |
| | | R | | | R | | | R | Replace at every 15000 km. |
| C | C | R | C | C | R | C | C | R | Replace at every 15000 km. |
| | CL,A | | CL,A | | R | | CL,A | | Replace at every 30000 km. |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | |
| C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | Replace if required |

Periodic Maintenance & Lubrication Chart



| Sr. No. | Activities / Check Points | Recommended Frequency - Service Interval & km | | | | | | | |
|---------|--|---|------------|--------------|---------------|----------------|----------------|----------------|----------------|
| | | Servicing | 1st (Free) | 2nd (Free) | 3rd (Free) | 4th | 5th | 6th | 7th |
| | | km | 500 750 | 4500 5000 | 9500 10000 | 14500 15000 | 19500 20000 | 24500 25000 | 29500 30000 |
| 12. | EVAP system hoses- check for cracks | C,R | | C,R | C,R | C,R | C,R | C,R | C,R |
| 13. | Silencer drain hole cleaning | CL | | | CL | CL | CL | CL | CL |
| 14. | Wiring harness connections, routine & Conduit / PVC sleeve inspection. | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T |
| 15. | Battery, connections & health by load tester. +ve terminal cap fitment. | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T |
| 16. | Ignition switch contacts cleaning | CL,L | | | CL,L | CL,L | CL,L | CL,L | CL,L |
| 17. | HT coil connections | C,T | | C,T | C,T | C,T | C,T | C,T | C,T |
| 18. | Starter motor & starter relay connections (for ES) | C,T | | C,T | C,T | C,T | C,T | C,T | C,T |
| 19. | Check fault code, Clear fault history, Update latest hex file if applicable. | C | C | C | C | C | C | C | C |
| 20. | Non- sealed Drive chain wear**- Clean, Lubricate & adjust. Replace if required | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A |
| 21. | Drive chain link lock | R | | | | | R | | |

Periodic Maintenance & Lubrication Chart



| Recommended Frequency - Service Interval & km | | | | | | | | | Remarks |
|---|---------|---------|---------|---------|---------|---------|---------|---------|--|
| 8th | 9th | 10th | 11th | 12th | 13th | 14th | 15th | 16th | |
| 34500 | 39500 | 44500 | 49500 | 54500 | 59500 | 64500 | 69500 | 74500 | |
| 35000 | 40000 | 45000 | 50000 | 55000 | 60000 | 65000 | 70000 | 75000 | |
| C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | Replace if found cut/ damaged |
| CL | CL | CL | CL | CL | CL | CL | CL | CL | |
| C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | Damaged conduit / PVC sleeves protection by applying electrical tape film |
| C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | Apply petroleum jelly on battery terminals Use Midtronics battery tester. |
| CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | Use recommended WD40 spray |
| C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | |
| C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | |
| C | C | C | C | C | C | C | C | C | |
| CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | During 1st Free Service: Use lint free cloth for cleaning & SAE 90 oil for lubrication without removing from vehicle. During all other services: Remove, Clean by Diesel & Lubricate using molten chain grease. |
| | R | | | | R | | | | Replace at every 20,000 km. |

Periodic Maintenance & Lubrication Chart

| Sr. No. | Activities / Check Points | Recommended Frequency - Service Interval & km | | | | | | | |
|---------|--|---|------------|--------------|---------------|----------------|----------------|----------------|----------------|
| | | Servicing | 1st (Free) | 2nd (Free) | 3rd (Free) | 4th | 5th | 6th | 7th |
| | | km | 500 750 | 4500 5000 | 9500 10000 | 14500 15000 | 19500 20000 | 24500 25000 | 29500 30000 |
| 22. | Main stand & side stand both pivot pin | C,L | | | | | C,L | | |
| 23. | Steering play | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |
| 24. | Steering stem bearing & Cap steering bearing (Plastic)** | C,CL,L | | | C,CL,L | | C,CL,L | | C,CL,L |
| 25. | Front fork oil & seal | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R |
| 26. | Brake shoes for wear limit. | C,R | C,R | C,R | C,R | R | C,R | C,R | R |
| 27. | Brake cam | CL,L | | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L |
| 28. | Rear sprocket fasteners for looseness. | C,T | C,T | | C,T | | C,T | | C,T |
| 29. | Rear wheel rubber shock dampers for excess play. | C,R | | | C,R | | C,R | | C,R |
| 30. | Fairing & windshield well nuts for rubber cracks | C,R | | | C,R | C,R | C,R | C,R | C,R |
| 31. | All cables free play adjustment | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |
| 32. | Head light focus adjustment | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |

Periodic Maintenance & Lubrication Chart

| Recommended Frequency - Service Interval & km | | | | | | | | | Remarks |
|---|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|---|
| 8th | 9th | 10th | 11th | 12th | 13th | 14th | 15th | 16th | |
| 34500 35000 | 39500 40000 | 44500 45000 | 49500 50000 | 54500 55000 | 59500 60000 | 64500 65000 | 69500 70000 | 74500 75000 | |
| | C,L | | | | C,L | | | | Use recommended AP grease. |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | |
| | C,CL,L | | C,CL,L | | C,CL,L | | C,CL,L | | Replace if required. Use Limaplex grease for lubrication |
| C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | Replace oil & oil seal + dust seal in pair at every 30,000 km |
| C,R | C,R | R | C,R | C,R | R | C,R | C,R | R | Replace at every 15000 km |
| CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | Use AP grease. |
| | C,T | | C,T | | C,T | | C,T | | Use model wise torque values. |
| | C,R | | C,R | | C,R | | C,R | | Replace rear wheel rubber shock damper if required |
| C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | Replace if rubber found cracked |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | Replace cables if operation found hard. |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | |

Periodic Maintenance & Lubrication Chart

| Sr. No. | Activities / Check Points | Recommended Frequency - Service Interval & km | | | | | | | |
|---------|--|---|------------|--------------|---------------|----------------|----------------|----------------|----------------|
| | | Servicing | 1st (Free) | 2nd (Free) | 3rd (Free) | 4th | 5th | 6th | 7th |
| | | km | 500 750 | 4500 5000 | 9500 10000 | 14500 15000 | 19500 20000 | 24500 25000 | 29500 30000 |
| 33. | Check & confirm all bulbs / switches working. | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |
| 34. | General lubrication – Clutch lever / front brake lever & kick lever | L | L | L | L | L | L | L | L |
| 35. | Tyre air pressure. | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |
| 36. | Mirror position & joint firmness. | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |
| 37. | USB Mobile charger | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R |
| 38. | All fasteners tightness, few are - Front & rear axle, Swing arm axle, Engine foundation, Rider foot rest, Pillion stay | C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T |

*** More frequent cleaning may be required while driving in dusty environment.

C : Check, A : Adjust, CL : Clean, R : Replace, T : Tighten, L : Lubricate

Note : Periodic parts, Oil, Filters, All types of greases, Cleaning agents, Cables, Wear & tear parts, Rubber 'O' rings / oil seals / pipes, Gaskets to be replaced as per Periodic Maintenance and Lubrication Chart are mandatory and the same are chargeable to customer.

Periodic Maintenance & Lubrication Chart



| Recommended Frequency - Service Interval & km | | | | | | | | | Remarks |
|---|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|--|
| 8th | 9th | 10th | 11th | 12th | 13th | 14th | 15th | 16th | |
| 34500 35000 | 39500 40000 | 44500 45000 | 49500 50000 | 54500 55000 | 59500 60000 | 64500 65000 | 69500 70000 | 74500 75000 | |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | |
| L | L | L | L | L | L | L | L | L | Use recommended AP grease. |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | Ensure tyre air pressure as per specifications. |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | |
| C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | To be checked in engine start condition using LED USB light. |
| C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | Use model wise torque values. |

Non-use maintenance is necessary if a vehicle remains off road for a longer duration (more than 15 days**). The correct and careful non-use maintenance carried out before storing the vehicle will prevent the vehicle from rusting and from such other non-operational damages like fire hazards.

- Clean the entire vehicle thoroughly.
- Empty the fuel from the fuel tank (if fuel is left in for a longer time, the fuel will break and gummy substance could clog the fuel system).
- Remove spark plug & put several drops of engine oil into the cylinder. Kick engine over slowly a few times to coat cylinder wall with oil & install back spark plug.
- Set the vehicle on a box or a stand so that both wheels are raised off the ground.
- Spray oil on all unpainted metal surfaces to prevent rusting. Avoid getting oil on rubber parts or brake liners.
- Cover entire vehicle neatly. Make sure that storage area is well ventilated & free from any source of flames or spark.

- Fill 10% excess air pressure in both wheels.

** For Battery :

- a. Remove battery and keep it on wooden plank, in properly ventilated area.
 - b. Before taking the vehicle for use.
- Get the battery recharged from the Authorised Service Center / Battery Dealer.
 - Apply petroleum jelly on battery terminals.

Preparation for regular use after storage :

- Follow daily safety checks.

Delivery Certificate

PLATINA

FRAME NO. : -

ENGINE NO. : - Sold on.: _____

Customer's Name Mr/Mrs/Miss : _____

Address : _____ Contact No.: _____

I have taken possession of motorcycle along with the following items.

- | | |
|-------------------|-------------------------------------|
| 1. Owner's Manual | 5. Standard Accessories |
| 2. 2 nos of key | 6. Battery Make _____ Sr. No. _____ |
| 3. Set of tools | 7. Tyre Fr Make _____ Sr. No. _____ |
| 4. First Aid Kit | Rr Make _____ Sr. No. _____ |

The Vehicle has been delivered to my satisfaction & I have understood all terms and conditions of warranty, service schedules & maintenance tips and shall abide by them.

Dealer Code : _____

Dealer Name : _____

Address : _____

Contact No. : _____

Customer's Signature (To be filled in by the dealer)

Bajaj Auto Limited provides the following warranty in respect of the “**Platina 100 BS VI / Platina 110 BS VI**” motorcycle manufactured by us.

Every possible care and precaution has been taken to ensure quality in respect of the material & workmanship in the vehicles manufactured by us. Bajaj Auto Limited will repair or replace at their Authorised Workshops, free of charge, part or parts thereof as may be found, on examination, to have manufacturing defect within a period of **5 Year or 75,000 km.**, whichever is earlier from the date of sale subject to fulfillment of conditions stipulated in part A, B & C given here under

Note : Warranty is applicable for only first owner of vehicle.

Part A:

Warranty claims in respect of such items like shock absorbers, speedometers etc. though claimed through us, are subject to acceptance of the respective manufacturers. In all such cases the decision of the respective manufacturer will be final and binding.

Proprietary parts like tyres, tubes, battery are warranted by their respective manufacturers and should be claimed on them directly by the customer. Bajaj Auto Limited shall not be Liable to replace them through their dealer, however

Bajaj Dealers will provide full assistance in referring such claims with respective manufacturer.

Bajaj Auto Limited undertake no liability in the matter of consequential loss or damage caused due to the failure of the parts. Delay, if any, at the repairing workshop in carrying out repair to vehicle shall not be a ground for extending the warranty period, nor shall it give any right to the customer for claiming any compensation for damages.

Bajaj Auto Limited reserves the right either to repair or replace the defective parts.

Where a defective part can be replaced by part/s of alternative brand/s, which are normally used by Bajaj Auto Limited in the course of manufacture, Bajaj Auto Limited reserves the right to carry out the replacement by a part or parts of any such alternative brand/s.

This warranty and any claim arising there, is subject to Pune jurisdiction only.

Part B:

No claim for exchange or repair can be considered unless the customer :

- a. Ensures that immediately upon detection of the defect, he approaches any nearest Authorised Bajaj Vehicle Dealers & Recommended Authorised Service Dealers with the concerned vehicle and enables him

to remove and despatch the part / parts attributing to the manufacturing defect to the Company.

- b. Produces the Owner's Manual, in original, to enable that dealer to verify the details.

It must be expressly understood that claims forwarded directly to us by the owner / customer will not be entertained at all and such defective part/parts thus forwarded by them will lie at our factory at their own risk, and this warranty shall not be enforceable.

To avail benefits of warranty, following are mandatory

1. Availing of Initial 3 Free Services without lapse.
2. Availing paid services at subsequent 5000 km. or 120 days from last service whichever is earlier without any lapse.
3. Availing of all services at the Authorised Vehicle Dealers & Recommended Authorised Service Dealers.
4. Usage of only recommended engine oil "Bajaj 10000" at specified frequency for drain interval of 10,000 kms. & engine oil level top-up at 5000 km.
5. Replacing mandatory periodic parts such as air filter, oil filter etc. as per periodic maintenance schedule.

Part C :

Further this warranty is NOT applicable to :

1. Normal maintenance operations like brake & clutch adjustments, cleaning of fuel system, engine tune-up or such other adjustments.
2. Parts subjected to normal wear & tear like Clutch Plates, Brake Shoes, Chain, Sprockets, Fork Oil Seal, Spark Plug, Control Cables, Brake Pads.
3. Replacement of bulbs & rubber components like grommets, 'O' rings, bellows as well as filters, packings, gaskets, fasteners etc.
4. Painted parts. Only blistering or peeling off of paint film are covered under warranty. Any defect arising out due to external damages or due to usage of protective covers /additional protective coatings adverse atmospheric conditions etc. are not allowed like under warranty.
5. All consumables like Engine oil, Fork oil, Brake Oil, Grease etc. are chargeable to customer.
6. Any defect arising due to above consumables not changed as per scheduled or if used other than the recommended one.
7. Never drive your bike through flooded roads or a flooded patch, as damages to the engine parts due to water entry is not covered under warranty.

8. All chrome plated parts are prone to rust or corrosion in coastal area or in acidic environment or due to neglected cleaning etc. However chrome film peeling is covered under warranty in general atmospheric conditions. Blue/ Yellow colouration of silencer near exhaust port is permissible and hence not covered under warranty.
9. Oxidation of unpainted/painted crankcase, cylinder block, cylinder head etc. in acidic environment or in a coastal area.
10. Parts of the vehicle that have been subjected to misuse, accident, negligent treatment OR which have been used in conjunction with parts & an equipment not manufactured or recommended for use by Bajaj Auto Limited, if found is the sole judgement of Bajaj Auto Limited, such use prematurely affects the performance and reliability of the vehicle.
11. Parts of the vehicle that have been altered and modified or replaced in unauthorized manner like use of wider tyres, loud silencers etc and which in the sole judgement of the Bajaj Auto Limited affects its performance and reliability.
12. **Vehicles which are not being serviced at recommended dealers as per the service schedule described or which have not been operated or maintained in accordance with the instructions maintained in the Owner's Manual.**
13. Vehicles used for any competition or race and/or for attempting to set up any kind of record.
14. Any failure arising due to use of adulterated or bad quality fuel.
Parts affected due to bad fuel quality are not covered Under warranty.
15. If additional electrical accessories such as - Remote, Bigger horn, Musical brake light etc. fitted on vehicle.
16. If the vehicle has been used for commercial purpose like Taxi or any other means of commercial transportation.

Bajaj Auto Limited reserves the right to make any changes in design or to add any improvements on the vehicle at any time without incurring any obligation to install the same on a vehicle previously supplied and sold. Also, the conditions of this warranty are subject to alteration without any notice.

This warranty is the entire written warranty given by Bajaj Auto Limited for **“Platina 100 BS VI / Platina 110 BS VI”** motorcycle’ and no other dealer or its or his agent or employee is authorised to extend or enlarge this warranty.

BATTERY WARRANTY CARD

MAKE OF BATTERY :

MFG. CODE OF BATTERY :

BATTERY SR. NO.:

BATTERY CHARGING DATE :

TYPE OF BATTERY :

VEHICLE SALE DATE :

NAME OF OWNER AND ADDRESS :

TYPE OF VEHICLE :

REG. NO.:

FRAME NO.:

ENGINE NO.:

SERVICE RECORD

| Sr. No. | Date | Age Mths. | Voltage | Remarks | Dealer's Stamp & Signature | * Code |
|---------|------|-----------|---------|---------|----------------------------|--------|
| 1 | | | | | | |
| 2 | | | | | | |
| 3 | | | | | | |
| 4 | | | | | | |
| 5 | | | | | | |
| 6 | | | | | | |

*** Code For Remarks:**

AE : Electrical system needs attention.

IR : Insufficient running of vehicle.

CB : Cover broken.

BC : Broken Container.

PM : Poor maintenance.

BA : Battery abused.

Note : Customer should insist that "Service Record" must be filled by respective authorised battery dealer as proof of specified maintenance for easy settlement of claim, if any.

TO BE FILLED IN BY BATTERY DEALERS / DISTRIBUTORS IN CASE OF CLAIM

Name of Dealer & Code : _____

Date of claim : _____ Battery Type : _____

Serial No. : _____ Date of Fitment : _____

Failure Mode (Please tick as applicable)

- | | |
|------------------------|----------------------------|
| • Loose connection | • Overcharge / Undercharge |
| • Internal Short | • Reverse Charge |
| • Plate Shedding | • Left Lying Idle |
| • Does not Hold Charge | • Wrong Assembly |
| • Wrong Application | • Terminal Corroded |

Claim Accepted

Claim Rejected

Details of Repair, if any _____

Note:

Please contact nearest respective authorised battery dealer for details immediately after purchase of vehicle.

Use only Bajaj Genuine Oil

PLATINA

BAJAJ
...THE WORLD'S
FAVOURITE
INDIAN

Always Use
Bajaj Genuine
High Performance
Engine Oils

4T
Premium
Engine Oil

BAJAJ
10,000

10W 30



BAJAJ
10,000

10W 30



Top up
bottle

Long Drain Interval of 10,000 kms*



Reduced Friction



Clean Engine Parts,
Longer Engine Life



Smooth Clutch
Control



* Top up recommended at 5,000 kms

PLATINA

BS VI

We are committed to provide the best of sales & service experience, however should you require any additional assistance, please call our Call centre on the number given below.



: 7219821111

Call charges are as applicable

**Call centre timings :- Monday to Sunday
(09 : 00 am - 08 : 00 pm)**



Please download customer care app from '**Google play store**' and '**Apple store**' and book the vehicles for servicing and more on your phone.

E-mail : customerservice@bajajauto.co.in

Web Site : www.bajajauto.com

CIN : L65993PN2007PLC130076