



Owner's Manual

JAMINAR
250



THE WORLD'S
FAVOURITE
INDIAN



REV. 01 JULY, 2025



WELCOME TO THE DOMINAR CLAN!

You are now the proud owner of the modern masterpiece, Dominar 250 BS VI. The new Dominar 250 BS VI is designed to deliver unparalleled technology with superior performance. This makes your Dominar, unbeatable and unchallenged on every street.

Before you ride out, please read this Owner's Manual carefully and familiarise yourself with the operation mechanism, controls and maintenance requirements of your Dominar 250 BS VI. This will ensure you a safe and trouble free ownership experience.

To keep your bike in perfect running condition and deliver consistent performance, we have specially programmed the periodic maintenance services which includes 3 free services and subsequent paid services, as per the schedule contained in this booklet. We earnestly advise you to avail all these services at any of our Bajaj Dealers, who are well

equipped with all necessary facilities, genuine parts, oil and trained manpower to ensure the best care for your Dominar. Your '**Dominar 250 BS VI**' comes with a warranty of **5 years or 75,000 KMs**, whichever occurs earlier from the date of sale. For details please refer to "Warranty: Scope & Limits" given in this manual.

Should you require any addition information, feel free to contact us on our toll free no.: **1800 233 2453** or e-mail us at:customerservice@bajajauto.co.in or visit the Bajaj Auto website www.bajajauto.com

Also, do like our facebook page www.facebook.com/BajajDominar and subscribe to our Youtube channel to stay tuned on any new information on the brand.

Get set to dominate the night!

TABLE OF CONTENTS

| SR. | DESCRIPTION | Pg. No. | | |
|-----|--|---------|--|-------|
| 1. | Technical Specification | 1 | 17. Safe Riding Tips | 30 |
| 2. | Identification Data | 3 | 18. Engine Oil | 31 |
| 3. | Location of Parts | 4 | 19. Tubeless Tyre & Tyre Pressure | 32 |
| 4. | Steering cum Ignition lock & Cranking ON and OFF duration control | 5 | 20. Battery | 33 |
| 5. | Fuel Tank Cap & E20 Petrol | 6 | 21. Engine Cooling System / Coolant | 34/35 |
| 6. | Instrument Cluster Details | 7 | 22. Periodic Maintenance Information | 36 |
| 7. | Instrument Cluster Setting | 16 | 23. Brake Fluid | 37 |
| 8. | Bajaj Ride Connect | 18 | 24. Usage of 'Luggage straps' with bungee cord | 38 |
| 9. | Control Switch LH | 20 | 25. Twin Channel ABS System | 39 |
| 10. | Control Switch RH | 21 | 26. Mobile Charger | 40 |
| 11. | Automatic Headlamp & Lights Operation | 22 | 27. Vehicle Cleaning and Washing Care | 41 |
| 12. | Removal of Pillion & Rider Seat / Tool kit | 23 | 28. Free Service Guidelines | 43 |
| 13. | Fitment of Rider & Pillion Seat | 24 | 29. Periodic Maintenance & Lubrication Chart | 44 |
| 14. | Daily Safety Checks | 25 | 30. Non Use Maintenance | 52 |
| 15. | How to ride your Bike | 26 | 31. Delivery Certificate | 53 |
| 16. | Good Riding Habits | 29 | 32. Warranty Scope & Limit | 54 |
| | | | 33. Battery Warranty Card | 57 |

SAFETY AND WARNING INFORMATION:



Warning: This indicates that a potential hazard or injury to you or other persons & to the vehicle can happen if advice provided is not followed.



Caution: This indicates that a potential hazard that could result in vehicle damage. Follow the Advice provided with the caution.

NOTICE

The description and illustration in this booklet are not to be taken as binding on the manufacturers. The essential features of the type described and illustrated herein remaining unaltered. Bajaj Auto Limited reserves the right to carry out at any moment without being obliged to bring this booklet upto-date & to do modifications on the vehicle, parts or accessories as may be convenient and necessary.

TECHNICAL SPECIFICATIONS

| PARAMETER | Dominar 250 BS VI |
|-----------------------|-----------------------|
| Engine | |
| Engine | 4 Stroke, Single Cyl. |
| Bore x Stroke | 72 mm x 61.1 mm |
| Engine Displacement | 248.77 cc |
| Compression Ratio | 11.9:1 |
| Idling Speed | 1550 \pm 100 RPM |
| Max. Net Power | 27 Ps @ 8500 RPM |
| Max. Net Torque | 23.5 Nm at 6500 RPM |
| Ignition System | DC |
| Fuel system | Fuel Injection System |
| Spark Plug | 1 No. |
| Spark Plug Gap | 0.8 ~ 0.9 mm |
| Lubrication | Wet sump forced |
| Transmission | 6 speed constant mesh |
| Gear Shifting Pattern | 1 Down 5 Up |
| Engine Cooling | Water cooling |
| Starting Aid | Electric starter |
| Front & Rear Brake | Disc Brake |

| PARAMETER | Dominar 250 BS VI |
|---------------------|-----------------------------------|
| Fuel Tank Capacity | |
| Full | 13 liters |
| Reserve | Nil |
| Dimensions | |
| Length | 2156 mm |
| Width | 836 mm |
| Height | 1112 mm |
| Wheelbase | 1453 mm |
| Ground clearance | 157 mm |
| Tyre Size | |
| Front | 100/80-17, 52P Tubeless |
| Rear | 130/70-17, 62P Tubeless |
| Tyre Pressure | |
| Front | 1.75 kgf/cm ² (25 PSI) |
| Rear (Solo) | 2 kgf/cm ² (28.4 PSI) |
| Rear (with pillion) | 2.25 kgf/cm ² (32 PSI) |

TECHNICAL SPECIFICATIONS

| PARAMETER | Dominar 250 BS VI |
|-------------------------|--------------------|
| Electricals | |
| Electrical System | 12 Volts DC |
| Head Lamp | LED |
| Position Lamp | LED |
| Tail /Stop Lamp | LED |
| Side Indicator lamp | LED (4nos) |
| Neutral Indicator | LED-GREEN |
| Hi Beam Indicator | LED-BLUE |
| Turn Signal Indicator | LED-GREEN |
| Speedometer-back light | Reverse colour LCD |
| Fuel Level Indicator | LCD Bars |
| Low Oil Pr. Indicator | LED-RED |
| Malfunction Indicator | LED-YELLOW |
| Coolant Temp. Indicator | LED-RED |
| Low Battery Indicator | Display on LCD |
| RPM Limit | Display on LCD |
| Service Reminder | Display on LCD |
| MTC OFF | Display on LCD |

| PARAMETER | Dominar 250 BS VI |
|-----------------------|-------------------|
| Electricals | |
| Side Stand Indicator | Display on LCD |
| ABS Indicator | LED-YELLOW |
| Rear No. Plate Lamp | LED |
| Horn | 12V |
| Battery | 12V 8Ah VRLA |
| Vehicle Weight | |
| Vehicle Kerb Weight | 180 Kg. |
| Gross Vehicle Weight | 330 Kg. |

NOTE

- All dimensions are under UNLADEN condition.
- Above information is subject to change without any notice.
- This vehicle complies to BS VI standards
- AHO is government regulation.

IDENTIFICATION DATA



The Frame and Engine serial numbers are used to register the motorcycle. They are the unique alpha-numeric codes to identify your particular vehicle from others of the same model and type.

FRAME NUMBER LOCATION

| On Seat Mounting Bracket
(Alpha-Numeric - 17 Digits)

ENGINE NUMBER LOCATION

| On LH Side Crankcase Near Gear
Change Lever (Alpha-Numeric - 11 Digits)

LOCATION OF PARTS



LOCATION OF PARTS



STEERING CUM IGNITION LOCK

It has three positions.

| | |
|---|--------------------------------------|
| ● | LOCK: Steering locked. Ignition OFF. |
| ? | OFF: Steering unlock. Ignition OFF. |
| ? | ON: Steering unlock. Ignition ON. |

TO LOCK THE STEERING

To lock the steering, turn the handle bar to the left side. Turn the handle bar to the left or right. Push & Rotate the key to "LOCK" position & remove the key. **Steering locking on handle position left hand side only.**

TO UNLOCK THE STEERING

Insert the key in steering cum ignition lock. Push & Rotate it clockwise to "OFF" or "ON" position.

KEY

A common key is used for 'Steering cum Ignition lock', 'Fuel tank cap' & 'Rear Seat'

"Cranking ON and OFF duration" control –

- During Engine crank cycle cranking is allowed only for fixed duration and in between successive cranks (in case engine does not start) here is a cooling off period.
- Cranking on-off duration control feature to avoid battery discharge-
 - 1st Crank ON (5 sec) & Disable for 2 sec.
 - 2nd Crank ON (5 sec) & Disable for 2 sec.
 - 3rd Crank ON (5 sec) & Disable for 10 sec.

After a gap of 10 sec cranking cycle continues.

- Starter disabled if side stand down – With side stand down condition and vehicle in gear, Engine cranking is disabled through ECU.
- Headlight control on rpm – Headlamp will be turned ON only at Engine running condition.

FUEL TANK CAP & E20 PETROL



FUEL TANK CAP

- To open the fuel tank cap, open the flap. Insert the key in the lock and turn it clockwise and lift fuel tank cap.
- To lock the 'Fuel Tank Cap' insert the key in the lock and turn it clockwise and press fuel tank cap. 'Click' sound ensures cap is fully locked.



Precaution:

Do not attach metallic 'Key chain' as it may damage paint of petrol tank cover.


In case petrol is spilled out on fuel tank, it is to be immediately cleaned with clean soft cotton cloth to prevent permanent stain marks on fuel tank.

- There is no fuel cock.
- Always maintain minimum 3 Liter Petrol in fuel tank.
- Do not use adulterated fuel as it will result in rusting & clogging of Injector, Fuel pump module & catalytic convertor.

E20 PETROL

- This vehicle is compatible for "E20" Petrol i.e. Petrol blended with 20% Ethanol. E20 sticker affixed on fuel tank cap.
- In this vehicle 'E10' Petrol (existing) i.e. Petrol blended with 10% Ethanol also can be filled.

INSTRUMENT CLUSTER DETAILS

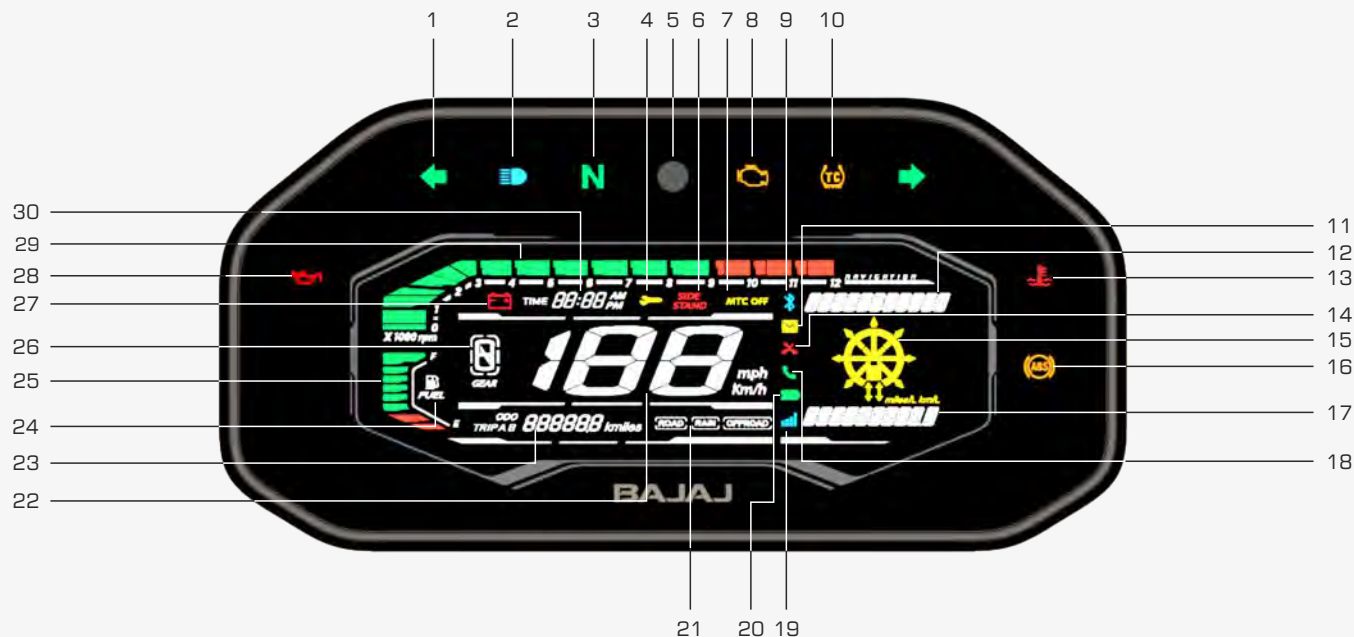

INSTRUMENT CLUSTER DETAILS

Speedometer display will work when Ignition switch is in 'ON' position and Kill switch in "ON" position.

- 1. Turn Signal Indicator (↔):** When Turn signal switch is pushed to Left or Right, LH or RH turn signal indicator will flash.
- 2. High Beam Indicator (⊙):** It glows when Headlight is ON & High beam is selected with engine running or Pass beam is selected.
- 3. Neutral Indicator (N):** When the transmission is in Neutral, Neutral indicator will glow.
- 4. Service Reminder (🔧):** 'Wrench' symbol glows when ODO meter reading reaches to set Kms. It indicates vehicle is due for periodic service.
- 5. Ambient Light Sensor:** Brightness adjustment of instrument cluster based on ambient light sensor reading.
- 6. Side Stand Indicator:** It gets displayed when Side stand is down.

| Side Stand Condition | Gear position | Remark |
|----------------------|---|---|
| Down | Engine in neutral gear position | Self-start / kick start possible |
| | Shifting gear from 'N' to 1st gear in engine start condition by pressing clutch lever | Engine will get cut off |
| Down | Engine in gear position | Engine will not start by self-start / kick start. |

7. MTC OFF: It gets displayed when traction control is deactivated. When traction control is activated MTC OFF will disappear from instrument cluster.

8. Malfunction Indicator (💡): It glows whenever any abnormality is noticed in functioning of FI system related components.

9. Bluetooth icon on Instrument cluster: It displays status of your smartphone pairing with your vehicle.

When ignition key turned "ON" bluetooth icon will blink for 10 seconds. Post that bluetooth icon will disappear, but will be active in background for pairing with smartphone.

Bluetooth icon steady: Paired with smartphone.

10. Traction Control Indication (🛞): Traction control system avoids or limits the slipping of wheels on the roads or on slippery surfaces during the acceleration. TC icon glows when Traction control is activated. .

When vehicle speed is more than 5 Km/h the Traction control indicator goes off, if this indicator glows while vehicle is running, it means there is problem in Traction control system.

Traction control can be switched off in "OFFROAD" Ride Mode only.

INSTRUMENT CLUSTER DETAILS

11. Message Alert: If your smartphone is paired with the instrument cluster of your vehicle via bluetooth, then you will get all the message alert on the instrument cluster. Incoming message alert icon will blink for 6 seconds. Post 6 seconds, message alert icon will displayed steady "ON".

If ignition key is turned "OFF" and then "ON" text message indication will disappear until a new message is received.

12. Top Multi Information Display: It displays following information:

- Warnings
- Turn by Turn details

13. Coolant Temperature Indicator: It glows when engine coolant temperature is more than 110°C.

14. Missed Call Alert: If your smartphone is paired with the instrument cluster of the vehicle via bluetooth, then you will get the missed call alerts on the instrument cluster.

15. Turn by Turn (TBT) Navigation Display:

The LCD has Turn by Turn navigation segments for navigation.

By default navigation is "OFF". To use navigation, your smartphone is to be paired with the instrument cluster of your vehicle via bluetooth.

Default: OFF

Navigation can be turned "ON" from "Bajaj Ride Connect" App by entering destination.

Based on turn, respective segments will be ON & rest will be turned OFF.

Top & Bottom Multi Information display will show following information's while using TBT navigation:

- "NO GPS" when smartphone GPS signal is not available.
- "REROUTING" when application is rerouting navigation.
- "DESTINATION" in top & "REACHED" in bottom multi information display when vehicle reached the desired location.
- Bottom multi information display will toggle between "ETA" - Estimated Time of Arrival and "ETD" - Estimated Travel Distance.
- Top multi information display will show "TURN-XXXX" if any turn is ahead, "XXXX" if vehicle needs to go on straight and "UTURN-XXXX" if a uturn is ahead.

Note: Map will be available for 7 years only.

16. ABS Indicator (ABS): With Ignition switch ON the ABS indicator glows. When vehicle speed is more than 5 Km/h the ABS indicator goes off, if this indicator glows while vehicle is running, it means there is problem in ABS.



INSTRUMENT CLUSTER DETAILS

17. Bottom Multi Information Display: It displays various information, such as IFE, DTE, AFE for Trip A or Trip B, Caller's name/ mobile number during call, Estimated time of arrival (ETA), Estimated travel distance (ETD), etc.

18. Incoming Call Alert: This symbol will become active and displayed blinking when there is incoming call and displayed steady "ON" only when call is received (If your smartphone is paired with the instrument cluster of the vehicle via bluetooth).

While receiving a call, caller's name/ mobile number will be displayed at multi-information display area. Call accept/ reject with the help of Call button on control switch LH.

19. Smartphone Network Range: It will display network of your smartphone on instrument cluster of your vehicle when connected via bluetooth.

20. Smartphone Battery level: If your smartphone is paired with the instrument cluster of the vehicle via bluetooth, then it will display battery level of your smartphone on instrument cluster.

21. Ride Modes: ABS ride modes namely Road, Rain and OFF-Road are provided with best optimized ABS intrusion suitable under each mode.

- Enter Ride mode selection with double tap 'Mode' button on control switch LH.
- With 1st double click, next Ride mode will start blinking
(ROAD → RAIN → OFFROAD).
- With series of double click (gap of less than 1 second than previous), rider can scroll through the ride modes as
ROAD → RAIN → OFFROAD → ROAD
- Rider is required to do Zero throttle to change the desired mode.
- After selecting required mode, rider should wait for system response:
 - a. If system accepts required mode, it will stabilize the blinking of selected mode and it will appear steadily.
 - b. If system rejects required mode, then instrument cluster will show previous/ default mode steadily.

INSTRUMENT CLUSTER DETAILS

Note:

Bike has a default mode which is set to "ROAD".

- If any system related error is present, only in that case default mode will be activated.

Ride Mode selection while vehicle running:

- Selection is accepted only in condition of Zero throttle.
- For OFFROAD mode selection vehicle speed should be less than 20 kmph.

Ride Modes:

A. Road Mode: Balanced on all kind of road surfaces, usually best for city & highway roads.

- This is your go to setting for everyday riding conditions. It provides a balanced and efficient braking performance on dry and stable conditions.
- Optimal stopping power without compromising stability.
- Responsive to rider input and adaptable to various scenarios.

B. Rain Mode: Better performing on wet/ slippery surfaces (designed for rainy season), smoother ABS with better deceleration and stability

- Riding a motorcycle during rains is riskier than doing so in normal weather conditions and dry terrains. During rains, the roads are wet and slippery, which require us to be extra cautious while riding.
- ABS rain mode delivers minimum braking distance with more accurate ABS interventions.
- Improved braking stability with reduce wheels slips.

C. OFF Road Mode: Specially made for broken road and village roads, giving good stopping ability with safety.


- It is designed to excel on challenging terrains, allowing for controlled sliding and enhanced maneuverability.
- ABS OFF-Road mode delivers minimum stopping distance with adequate tyre traction and braking stability on off-roads.
- Adaptability on all different bad road conditions and down hill ride.

INSTRUMENT CLUSTER DETAILS


22. Speedometer: Vehicle speed will be displayed in digital form in km/h.

23. Odometer/Tripmeter: The odometer shows the total distance that the vehicle has covered. Odometer cannot be reset to 'Zero'.

Trip A & Trip B shows the distance traveled since it was last reset to zero.

24. Low Fuel Level Indicator: () It blinks incase of low fuel level (1 bar or less).

25. Fuel Level Indicator: It shows available fuel in fuel tank.

26. Gear Indication (): It will display gear position from 1 to 6. It will display N when vehicle is in neutral position.

27. Low Battery Indicator (): It indicates battery needs charging.

28. Low Oil Pressure Indicator (): It glows when engine oil pressure is low.

29. Tachometer Dial: It shows engine speed in rpm. RPM bar will blink if rpm is more than 9000.

30. Digital Clock: It indicates time in HH:MM (AM/PM).

Instrument Cluster automatic brightness adjustment:

Instrument cluster shall adjust brightness intensity based on ambient light sensor reading.

Note :


After switching 'ON' the ignition switch, the following indications will remain 'ON' till engine is started.

- Malfunction Indicator
- Low Oil Pressure Indicator
- ABS Indicator
- Coolant Temperature Indicator
- Traction control icon

Instructions :

Incase Coolant temperature indicator, Malfunction indicator, Low oil pressure indicator, ABS indicator gets 'ON' during vehicle running, bring the vehicle nearest BAL authorised workshop for inspection/ repair.

DETAILS - ODO & IFE

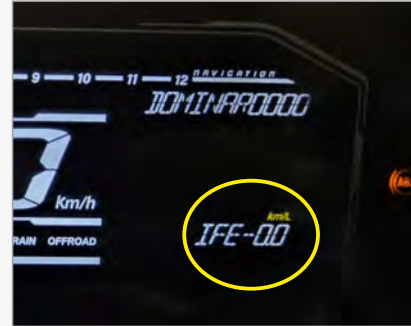

Condition


Ignition switch is 'ON' & Mode button not pressed, ODO will be displayed. In ODO mode, press Mode button for more than 3 sec., IFE will be displayed.

1. **ODO:** The Odometer shows the total distance that the vehicle has traveled.
2. **IFE (Instantaneous Fuel Economy):** This will indicate fuel economy in km/L. at any given time. Value will be displayed only when vehicle speed & Engine RPM is more than zero.
If vehicle speed is zero then IFE will be displayed "-- km/l".

Note:

IFE (Instantaneous fuel economy) / AFE (Average fuel economy) / DTE (Distance to empty) readings are indicative & may vary due to driving and road conditions.

DETAILS - AFE A, TRIP A & AFE B, TRIP B

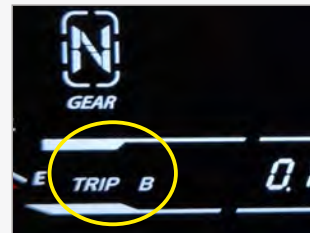

Procedure to set AFE A & TRIP A:

Ignition switch is 'ON' & mode push button pressed for less than 1sec.- TRIP A mode get selected.

Mode button pressed for less than 1 sec. in TRIP A mode - AFE A gets displayed.

1. **TRIP A:** The Trip meter shows the total distance that the vehicle has traveled in TRIP A mode. If TRIP A is reset, average fuel economy (AFE A) will reset.
2. **AFE A (Average Fuel Economy A):** This will indicate the average fuel economy in km/L in TRIP A mode.

Procedure to set AFE B & TRIP B:

Ignition switch is 'ON' & mode push button pressed for less than 1sec.- TRIP B mode get selected.

If mode button pressed for less than 1 sec. in TRIP B mode - AFE B gets displayed.

3. **TRIP B:** The Trip meter shows the total distance that the vehicle has travelled in TRIP B mode. If TRIP B is reset, average fuel economy (AFE B) will reset.
4. **AFE B (Average Fuel Economy B):** This will indicate the average fuel economy in km/L. in TRIP B mode.

Note: AFE will be updated every 60 sec. AFE will be reset if corresponding TRIP A or TRIP B is reset or battery disconnected.

DETAILS - DTE & TRIP



DTE (Distance to Empty):

- It indicates the estimated distance that the vehicle can travel under current fuel economy & fuel level condition.
- DTE calculation is independent of TRIP and based on AFE for distance covered for last 25 Kms.
- Max count of DTE is 990 Km. speedometer will display values in multiple of 10.


TRIP Setting:

- If Mode button is pressed more than 3 sec. in TRIP A or TRIP B mode, then respective AFE & trip distance will reset to Zero while DTE will continue to show earlier value.

Note:

- After completion of max value of 999.9 Km, selected trip display will get frozen and will not get set automatically to zero.
- However speedometer will continue to calculate and display AFE value.


Note:

- If vehicle is driven by ignoring fuel level display & Tank symbol () blinking after reaching fuel unutilized level DTE will be shown as '--' Km.

During Petrol Refilling:

- If petrol filled is more than 1 Liter then DTE will be calculated based on the revised fuel volume. If petrol filled less than 1 Liter then there will be no change in DTE value.

INSTRUMENT CLUSTER SETTING

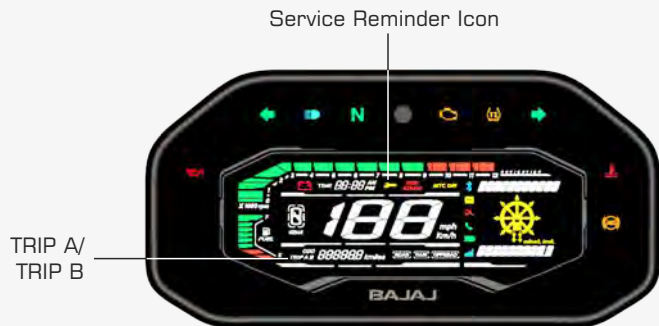

1. Trip Meter Reset :

Mode button is provided for selecting & resetting 'ODO / TRIP A / TRIP B'.

- Press mode button for less than 1 sec.
- Press mode button for more than 3 sec.

Mode changes from 'ODO/TRIP A/TRIP B

Selected 'TRIP A/TRIP B' will reset.
Other TRIP mode will continue updating.

2. Service Reminder Reset (wrench icon):

'Wrench' symbol glows when ODO meter reading reached to set Kms.


This icon will glow at :

1st : 450 Kms 2nd : 4450 Kms
3rd : 9450 Kms 4th : 14450 Kms
& subsequently at each 5000 Kms.

Note :

This icon shall be reset by BAL authorised workshop after periodic services are carried out.

INSTRUMENT CLUSTER SETTING

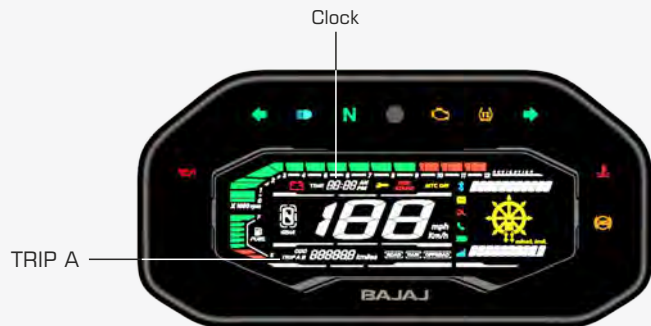

3. Clock Reset :

- Digital clock indicates time in HH & MM separated by colon':'
- It is 12 hour clock.
- Initially ':' will be blinking.
- Clock setting is possible in TRIP A mode only.

| | |
|--|--|
| Press Mode button for more than 3 sec | HH digits starts blinking. |
| Press Mode button for less than 1 sec. | Hour digits will increase. |
| Press Mode button for more than 3 sec. | HH value will be stored while MM starts blinking. |
| Press Mode button for less than 1 sec. | Minute digits will increase. |
| Press Mode button for more than 3 sec. | Minutes value will be stored. AM & PM starts blinking |
| Press Mode button for 1 sec. | Select AM/ PM. |
| Press Mode button for more than 3 sec. | All blinking stops and clock show the selected value of HH:MM AM/PM. |
| Clock mode is selected & no ending is carried out for more than 5 sec, | Auto exit without saving set value. If engine / vehicle rpm is given then system will exit from clock set mode without saving set value. |

BAJAJ RIDE CONNECT

Bajaj Ride Connect Application:

"Bajaj Ride Connect" Application is based on bluetooth connectivity with the instrument cluster. This app offers a range of features, including vehicle management, service booking, document storage and more. With seamless bluetooth connectivity to Pulsar, the app ensures a personalized and convenient riding experience for every register user.

Key features of the application:

Bluetooth: once connected to the vehicle through the application user can access below bluetooth features:

- Call Accept/ reject with the help of Call button on control switch LH.
- Smartphone battery level.
- Smartphone network range.
- Missed call.
- Message alert

Service:

- Book service appointment for relevant service type.
- Locate nearby BAL workshop location.

Document storage: Important vehicle related documents, such as insurance paper and registration certificates, can be securely stored within the app, providing easy access whenever needed.



Caution:

Document storage works as a digital wallet and is only for storage purpose.

Reminders: Users can set reminder for vehicle maintenance, service schedules, insurance renewals and other important tasks.

Trip with Turn by Turn Navigation: The app provides comprehensive navigation services with voice guidance, allowing users to set multiple stops and reach their destinations conveniently. It allow users to record their trips, capturing valuable data such as distance, duration and route. Additionally, users can share their exciting journeys with friends and family.



BAJAJ RIDE CONNECT

Application Download:


Bajaj Ride Connect application is available in the Google play store (for android) or Apple store (for iOS).

- Download the "Bajaj Ride Connect" App from Google play store/ Apple store.
- Click on "Sign up" to register in the App with your registered mobile number.
- Enter your personal details (first & last name).
- Enter VIN of your vehicle (VIN can also be scanned).
- Sign up in App
- Enter OTP.
- Login in App
- "Bajaj Ride Connect" App is ready to work.

Bluetooth Connectivity:

Your vehicle is equipped with bluetooth connectivity feature by which you can pair your smartphone with instrument cluster of your Pulsar vehicle through "Bajaj ride connect" application.

- Turn the ignition switch and kill switch "ON".
- Login "Bajaj Ride Connect" application on your smartphone.
- For first time pairing, allow the application to access:
 - a. Device's location if GPS is not enabled in your device.
 - b. Access your phone called logs.
 - c. Send and view messages.
 - d. Notification's

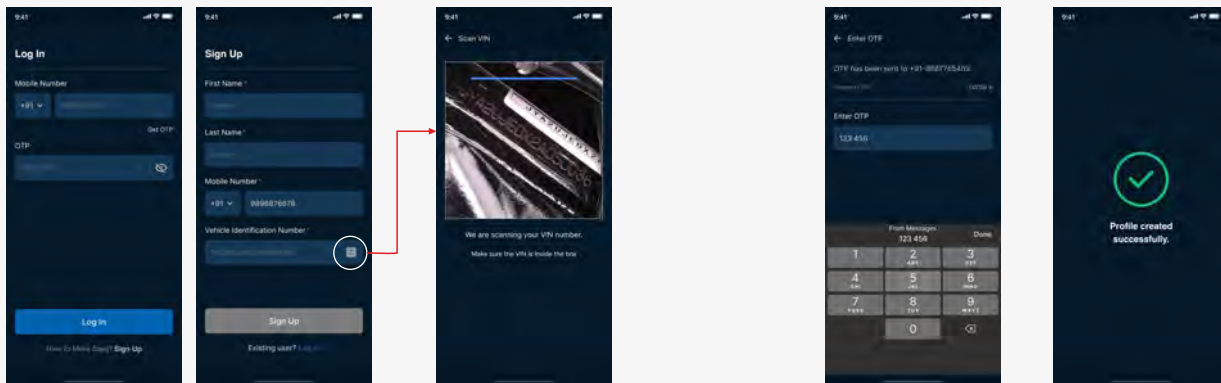

CONTROL SWITCH - LH



D. Mode Button

Mode button is used for :

- Call accept / reject.
 - Call accept : Press mode button for less than 1 sec.
 - Call reject : Press mode button for more than 3 sec.
- Toggle between Trip A, Trip B, Instrument cluster setting, Clock setting etc.
- To toggle or select between Right modes.

E. Turn Signal Switch

When the turn signal knob is pushed to Left (↵) or Right (↶) respective indicator will start blinking.

To stop blinking push the knob in & release.

F. Horn Button


(📢) Press button for sounding horn.

G. Pass Switch


Press the switch to put on Hi Beam filament of head light. It is used to give signal to vehicles coming from opposite side while overtaking.

When head light is ON, High or Low beam can be selected with this switch. High beam indicator light located on speedo console will light up when High beam is selected.

☞ High Beam ☞ Low Beam

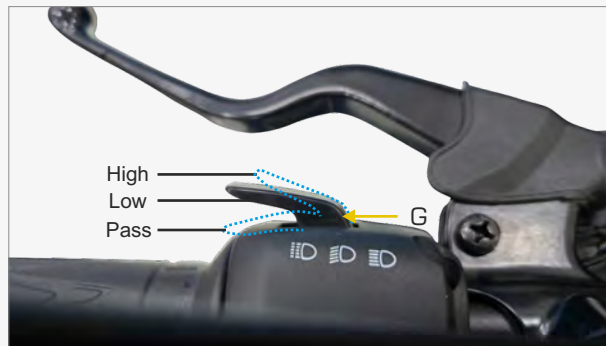

CONTROL SWITCH - RH

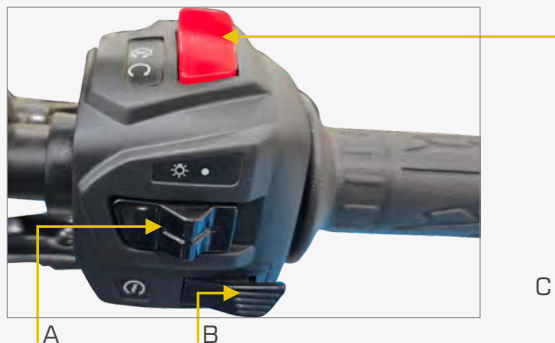

A. Head Light Switch

It has 2 positions.

| | |
|-----|----------------|
| ⊞⊝⊞ | Pilot Mode |
| ☀ | Headlight Mode |

B. Starter Button

Starter button operates the electric starter. It is recommended to start the engine with the transmission in neutral.

Vehicle in Gear - Press clutch lever & operate starter button to start the engine.

C. Engine Kill Switch









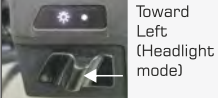
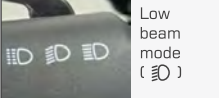

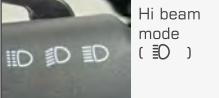

The engine kill switch is used for switching ON & OFF the engine.

| | |
|---|------------|
| ⊗ | Engine OFF |
| ⌚ | Engine ON |



AUTOMATIC HEADLAMP & LIGHTS OPERATION

NOTE

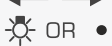- Your vehicle has a safety feature which turns ON the headlamp automatically, once the engine is started. This provides better visibility to other road users.
- While riding, low beam or hi beam mode can be switched ON by operating the low/hi beam selector switch, keeping the light switch in head light mode.
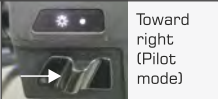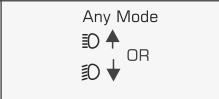
| IGNITION SWITCH | ENGINE | LIGHT SWITCH | LOW/HI BEAM SELECTOR SWITCH | THE FOLLOWING LIGHTS WILL GLOW | EFFECT IF PASS SWITCH IS PRESSED |
|---|---------|--|--|---|---|
|  ON (?) | OFF |  Any Position  |  Any Mode  | Front Position lamp, Tail Lamp, Rear Number Plate Lamp, Control Switch Illumination | Headlamp Hi beam & Low beam will glow. |
| | Started |  Toward right (Pilot mode) |  Any Mode  | Front Position lamp, Tail Lamp, Rear Number Plate Lamp, Control Switch Illumination, Headlamp Hi beam | Headlamp Low beam will also glow. |
| | |  Toward Left (Headlight mode) |  Low beam mode () | Front Position lamp, Tail Lamp, Rear Number Plate Lamp, Control Switch Illumination, Headlamp low beam | Headlamp Hi beam will also glow. |
| | | |  Hi beam mode () | Front Position lamp, Tail Lamp, Rear Number Plate Lamp, Control Switch Illumination, Headlamp Hi beam & low beam | No effect |

REMOVAL OF PILLION & RIDER SEAT / TOOL KIT

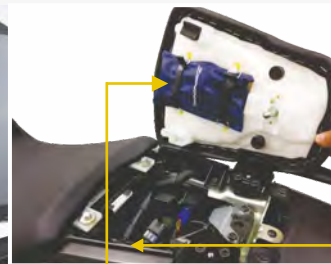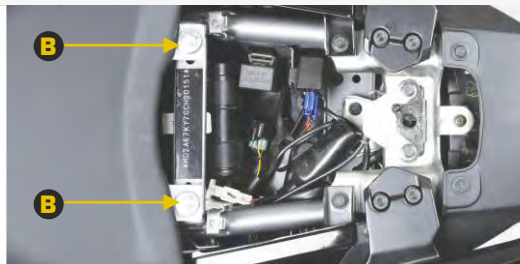

Tool Kit

First Aid Kit

Removal of Pillion Seat

- Insert Key into lock (A)
- Turn the key clock wise.
- Lift rear end of 'Rear seat'
- Pull 'Pillion seat' backward side.
- Take out 'Pillion seat'.

Removal of Rider Seat

- First remove 'Pillion seat'.
- Remove 'Rider seat' mounting bolts (B).
- Pull backward rear end of 'Rider seat'.
- Take out 'Rider seat'.




Tool Kit Location

- Tool kit fitment location is provided below pillion seat assembly.
- Tool kit to be clamped on Pillion seat assembly by rubber strap.

First Aid Kit Location

- It is located on LH side of Seat Cowl below the 'Pillion seat'.

FITMENT OF RIDER & PILLION SEAT

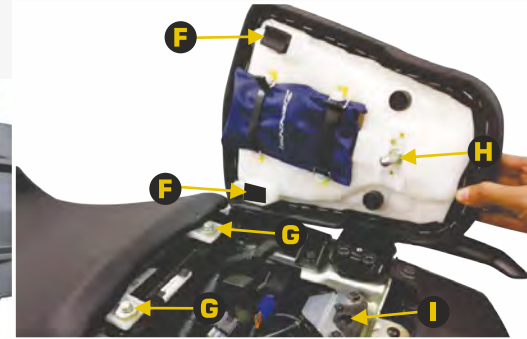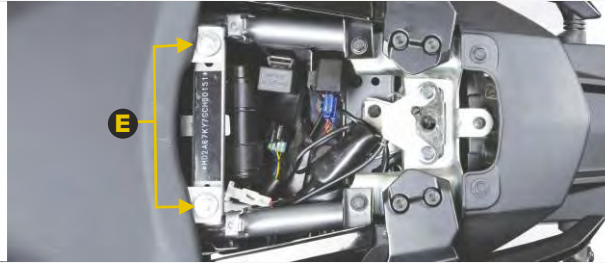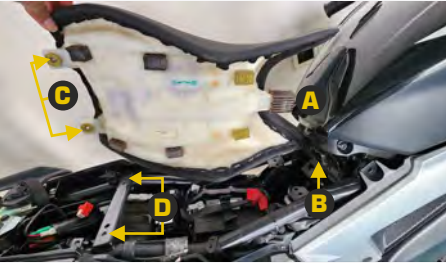

Fitment of 'Rider Seat'

- Match the bracket of 'Rider seat' (A) with slot (B), Ensure availability of rubber damper of seat center.
- Push 'Rider seat' toward petrol tank.
- Match 'Rider seat' rear brackets (C) with the holes (D) provided on chassis.
- Tighten the bolts (E).

Fitment of 'Pillion Seat'

- First make sure 'Rider seat' is fitted properly.
- Insure 'Tool kit' is located properly.
- Place 'Pillion seat' on fitment location.
- Match the bracket of 'Pillion seat' (F) with Hook (G).
- Insert lock rod (H) of seat into seat lock (I).
- Press rear portion of seat from top.

DAILY SAFETY CHECKS

Before riding motorcycle be sure to check following items. Please give proper importance to these checks and perform all of them before riding motorcycle.

If any irregularities are found during these checks, refer to the Maintenance chapter & see your dealer for the action required to return the motorcycle to a safe operating condition.



Warning: Failure to perform these checks every day before you ride may result in serious damage or severe accident.

- Enough fuel level for planned distance of journey. No fuel leakage in fuel lines.
- Engine oil level (between upper and lower level mark) at vehicle upright position on level surface.
- Throttle cable play of 3 mm. Smooth operation and positive return to closed position.
- Brake Fluid level above MIN mark provided on reservoir. (Both front and rear)

- Drive Chain slack of 20 ~ 30 mm adequately lubricated by OKS spray. This is available with BAL dealer for sale.
- Function of all lights & horn
- Clutch lever play - 3 mm
- Check Coolant level between MIN and MAX mark in coolant reservoir tank at vehicle upright position on level surface.
- Smooth steering movement without restriction.
- Side stand return to It's fully up position.
- Correct inflation pressure in both tyres
Adequate tyre tread depth - no cracks / cuts.
- Correct rear viewing span adjustment of mirror.
- Cleaning cloth not to be kept in vicinity of high temperature zone e.g. Radiator, engine, silencer assy, starter motor etc.
- Cleaning cloth to be strapped along with tool kit under seat assy.





HOW TO RIDE YOUR BIKE



Gear shifting pattern

1. STARTING THE ENGINE

- Turn ignition switch key to '  ' position.
- Put kill switch in '  ' position.
- Confirm that transmission is in neutral / press the clutch lever if transmission is in gear.
- Keep throttle closed & press starter button,
- Release starter button as soon as engine starts.

NOTE

Incase of battery discharged condition, vehicle will start by push start.

The motorcycle is equipped with a clutch switch. This switch ensures that the engine can be started in any gear if the clutch lever is pressed.

"Cranking ON and OFF duration" control –

Cranking ON-OFF duration control feature to avoid battery discharge-

- 1st Crank ON (5 sec) & Disable for 2 sec.
- 2nd Crank ON (5 sec) & Disable for 2 sec.
- 3rd Crank ON (5 sec) & Disable for 10 sec. After a gap of 10 sec cranking cycle continues.

2. SHIFTING GEARS

- Close throttle & press the clutch lever.
- Shift into next higher or lower gear.
- Open the throttle and release the clutch lever slowly and simultaneously.

3. MOVING OFF

- Check that side stand is up.
- Press the clutch lever.
- Shift into 1st gear.
- Open the throttle and release the clutch lever slowly and simultaneously.
- As the clutch starts to engage, open the throttle a little more, giving the engine just enough rpm to keep it from stalling.

HOW TO RIDE YOUR BIKE

RECOMMENDED SPEED FOR SHIFTING DOWN

| | |
|--|---------|
| From 6 th to 5 th Gear | 68 km/h |
| From 5 th to 4 th Gear | 62 km/h |
| From 4 th to 3 rd Gear | 46 km/h |
| From 3 rd to 2 nd Gear | 38 km/h |
| From 2 nd to 1 st Gear | 27 km/h |

4. BRAKING

- Close the throttle completely, leaving the clutch engaged (except where shifting gears) so that the engine braking will help slow down the motorcycle.
- Shift down one gear at a time so that you are in Neutral when you come to a complete stop.
- When stopping, always apply both brakes at the same time.



Warning : When shifting down to lower gear, do not shift at such high speed that engine rpm jumps excessively. This may cause engine damage, & rear wheel may skid. Downshifting should be done at recommended speeds as shown in table above.

5. STOPPING THE VEHICLE

- Close the throttle completely.
- Shift the transmission into neutral.
- Bring the vehicle to complete stop.
- Turn the ignition switch off.

6. RUNNING IN

Proper running-in is important for the better life & trouble free performance of the vehicle.

- During first 2000 kms running-in period do not exceed following speed limits.

| Kms | 1st | 2nd | 3rd | 4th | 5th | 6th |
|-------------|-----|-----|-----|-----|-----|-----|
| 0 - 1000 | 10 | 20 | 30 | 40 | 50 | 60 |
| 1000 - 2000 | 20 | 30 | 40 | 50 | 60 | 70 |

HOW TO RIDE YOUR BIKE

- Always keep the speed below the limits mentioned in the table.
- Do not race the engine excessively.
- Do not start moving or race the engine immediately after starting. Run the engine for a minute at idle speed to give the oil a chance to workup into the engine.

7. VEHICLE PARKING

- This vehicle do not have main stand.
- Support the motorcycle on a firm level surface with the side stand.
- Lock the steering on LHS.



CAUTION

1. Do not park on a soft or steeply inclined surface as the motorcycle may fall over.
2. Always ensure side stand is UP while starting off.
Ignition will be cut off if vehicle is attempted to be driven in side stand DOWN condition and 'side stand down' message will be displayed in speedometer.

3. If engine coolant temperature crosses 110°C , 'Coolant Temperature high' alarm message will be displayed on primary speedometer indicating engine is overheated. **If vehicle is further driven in such a condition coolant temperature will increases up to 115°C & ECU will not allow engine to run above 5000 RPM.**

4. This vehicle has new 'A & S clutch'(Assist & slipper)

Due to this, very little force is required for clutch lever operation. you won't feel jerks while sudden down shifting.

Slight pulsation is felt at clutch lever. This is normal & indicates 'A & S clutch' is working well.

5. Power output of headlight is only 20W max & hence continuously glowing headlight will not damage / reduce life of battery.

- Do Not rev engine in standstill condition.
- Don't use adulterated fuel as it will result in rusting & clogging of engine parts.

GOOD RIDING HABITS

- Always fill 91 octane petrol at reputed petrol pumps for optimum performance of bike.
- Always maintain minimum 3 liters petrol in petrol tank for smooth functioning of fuel pump.
- Always maintain recommended air pressure in both the tyres.
- Always maintain engine oil / coolant level between MIN & MAX mark at vehicle upright position on level surface.
- Avoid harsh braking.
- Always apply both brakes simultaneously.
- Always ensure brake fluid level in both front & rear reservoir is above MIN mark.
- Change the gear judiciously according to the speed and load requirement.
- Don't overload the vehicle above the specified payload.
- Use the accelerator judiciously.



- Cut off the engine if you want to stop for more than two minutes.
- Press clutch lever fully while shifting gears.
- Always ensure battery is fully charged.

HOW TO CHECK MILEAGE (FUEL EFFICIENCY)

Best way to calculate mileage is by following the full tank to full tank method.

- Fill way tank full up to small mouth (brim).
- Run the bike for say 100 km.
- Fill the tank full again in same fuel filling station, probably with same fuel dispenser.
- Divide kilometer run / fuel quantity filled.

SAFE RIDING TIPS


- Always wear Helmet while driving or riding. Your helmet should conform to Indian standards.
- Read thoroughly the instructions given in this manual and follow them carefully.
- Avoid unnecessary accessories for the safety of both rider and other motorists.
- Get familiar and follow traffic rules & regulations in your states as well as general traffic signs.
- Familiarise yourself well with starting, acceleration and braking of the vehicle.
- When applying the brakes, use both front & rear brakes simultaneously. Applying only one brake may cause the vehicle to loose control.
- Riding at proper speed, avoiding unnecessary acceleration and braking are important for safety, low fuel consumption and longer life of the vehicle.
- During monsoon, drive vehicle more cautiously. Remember vehicle skid more easily during light showers.
- Keep both hands firmly on handle bar & both feet securely on rider footrest. Do not take away both hands & / or feet from resting area as this is very unsafe.
- Do not use mobile phones while riding as it could lead to fatal accident.

- It is suggested to customer to take appropriate care in area of heavy monsoon or high rainfall area. The appropriate surface preventive coat to avoid rusting / poor surface finish on account of adverse atmospheric conditions.
- Always carry vehicle registration & insurance papers, and a valid driving licence with you.

General Maintenance Tips :

- Vehicle cleaning to be done with soft & clean wet cloth to avoid scratches on painted parts.
- Clean & lubricate all the important parts as detailed in a periodic maintenance chart.
- Do not apply direct water jet on painted, electrical / electronic parts.
- Do not obstruct engine cooling by adding mud protection sheet from front
- Drive cautiously. Start early & reach your destination safely.
- Avoid driving on loose sand or stones where vehicle is likely to skid.
- Properly wrap-up loose clothes while driving or riding to avoid entangling in wheel or other objects on road.
- Always concentrate on riding for safety.

ENGINE OIL

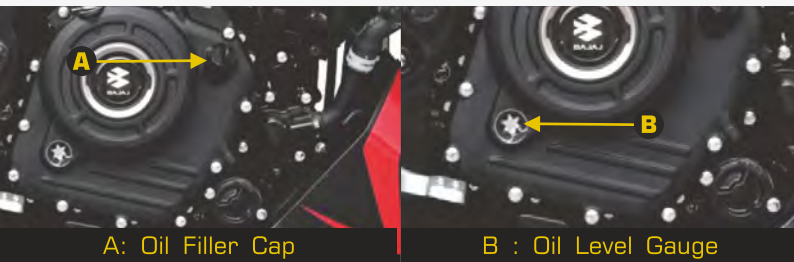

A : Oil Filler Cap

B : Oil Level Gauge

LEVEL CHECKING

- Check engine oil level every day at vehicle upright position on level surface (at engine cold condition).
- Check oil level through oil level gauge 'B'.
- Always maintain engine oil level between upper (C) and lower (D) mark provided on Cover RH. Top up with specified grade of oil if the oil level is below lower level mark.

ENGINE OIL CAPACITY

- Refill at servicing: 1700 ml.
- During engine overhaul: 1950 ml.



Caution: It is most important to adhere to recommended grade & frequency of oil change for the purpose of long life of critical engine components. For details refer periodic maintenance chart.

RECOMMENDED ENGINE OIL:

Always insist on Bajaj Genuine Engine Oil for optimum engine performance & warranty benefits. It is a specially formulated oil for Dominar 250.

| Model | Recommended Engine oil | Grade |
|-------------|------------------------------------|-------------------------------------|
| Dominar 250 | Bajaj 10000 10W50 BS6 Compliant | JASO MA2 API SN, Fully Synthetic |



C : Engine oil level upper limit D : Engine oil level lower limit

- For all BS VI Vehicles, BS VI compliant engine oil is to be used only. Use of BS VI engine oil will give prolonged life of catalytic convertor.
- Engine oil replacement frequency: 1st service & then every 10,000 km.
- Engine oil level top-up frequency: Every 5000 km.

TUBELESS TYRE & TYRE PRESSURE



TUBELESS TYRE

The main advantage of tubeless tyres is in case of puncture the rate of air leak is very slow, hence customer can easily drive the vehicle upto nearest puncture repair shop for removing puncture.

NOTE

Incase the motorcycle is fitted with imported tyres, compliance to respective Indian standard & central motor vehicle rules has been ensured.

WHEEL PUNCTURE

- Visit nearest known tubeless tyre repair shop to remove puncture.
- Remove puncture by Filler or Plug method only.
- Do not use patch method to remove puncture of tubeless tyre.

CAUTION

Tubeless tyres are fitted in this motorcycle. The walls of the tyres in contact with the wheel rim should not be damaged in any way during fitment/ removal of tyre. The tyre side walls in contact with wheel rim seals air.

- Tyre warranty is settled by tyre manufacturer.
- Decision is taken based on tyre wear and running of vehicle.
- BAL settles tyre warranty only for imported tyres.

TYRE PRESSURE

Keep recommended tyre pressure (as per Technical specifications) to increase life of the tyre & for better fuel consumption.

BATTERY



12V - 8 AH VRLA

- Battery is located below Rider seat.

BATTERY FEATURES

- No topping-up is required
- Reduced self discharge, Enhance safety.
- No vent tube open to atmosphere hence no discharge of electrolyte through vent tube.



CAUTION

Do not drive/ run vehicle in battery disconnected condition. It may lead to damage of electrical/ electronic components.

- Environment care must be taken to dispose off the used battery.
- It is always recommended to hand over the same to the Authorised battery / Bajaj dealer for proper disposal of the same.
- When 'Low battery icon' pop-up in speedometer display, it is advised to reach Bajaj dealer & get it charged immediately.
- Warranty for battery is 18 months from the date of purchase of vehicle.

HOW TO KEEP BATTERY HEALTHY?


- Switch 'Off' ignition when engine is not running.
- Get battery checked/ charged during periodic services.
- Do not add extra electrical accessories such as - Remote, Bigger Horn, Musical brake light etc. This will reduce life of battery & may damage ECU.
- Disconnect battery +ve & -ve wires if vehicle is to be stored for more than 2 weeks. This avoids self discharge.

ENGINE COOLING SYSTEM



Coolant
Expansion Tank

- Coolant is provided for cooling of engine.
- Water pump in the engine circulates the coolant in cooling system.
- The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap (A).
- Heat expansion causes excess coolant to flow into expansion tank.
- When the coolant temperature drops, this surplus coolant is sucked back into the cooling system.
- Cooling fan is provided for cooling of coolant circulated through radiator fins.

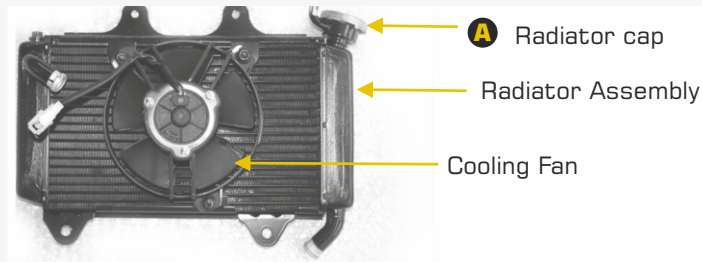

NOTE

Fan will start at temp 95°C and stops at 90°C . This is normal condition & it indicates cooling system functioning well.



WARNING:

During operation, the coolant gets very hot & is under pressure. In case of scalding, rinse immediately with lukewarm water. Do not remove radiator cap, radiator hose or other cooling system components when the engine is hot. Allow the engine & cooling system to cool down.

COOLANT



WARNING:

Coolant is poisonous and causes health hazard.


Avoid contact between coolant & skin, eyes and clothing. If it gets into your eyes, rinse immediately with water and contact a doctor.

Wash affected skin areas immediately with soap and water. If coolant is swallowed, contact a doctor immediately. Change clothes that have come in contact with coolant. Keep coolant out of the reach of children.

COOLANT SPECIFICATIONS

Use antifreeze ready to use
"Bajaj Koolex" coolant only.

Total coolant quantity : 1000 ml.
(750~780 ml in radiator &
220~230 ml expansion tank).

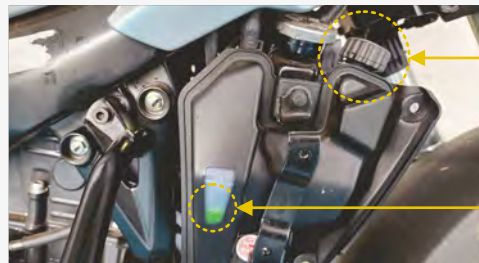

Expansion
Tank Cap (A)

Coolant
Level
Inspection
Window

COOLANT TOP UP

- Park vehicle at upright position on level surface. Remove 2 nos screws to access expansion tank cap.
- Check coolant level in engine cold condition only.
- Ensure coolant level is between Min & Max mark.
- Always top up coolant through expansion tank cap (A).
- Always replace coolant with "Bajaj Koolex" coolant only.
- Use nitrile rubber hand gloves while draining & topping up coolant.
- Do not top up coolant through radiator cap.

PERIODIC MAINTENANCE INFORMATION

Spark Plug

- Remove spark plug by using plug spanner.
- Clean the spark plug at 10000 Kms.
- Adjust the gap if incorrect by bending outer electrode carefully.


Spark Plug Gap: 0.8 to 0.9 mm.



Drive Chain Cleaning

Drive Chain (O-ring type)

Drive chain must be cleaned & lubricated as per PM schedule.

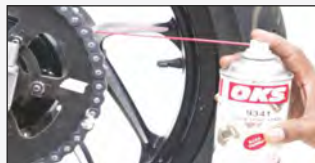

- 'O' rings must always be kept wet for best performance hence lubricate every 500 Km.
- **O-ring chain lubrication can easily be done by owners using Bajaj 'Chain Lube Spray Can' available with Bajaj dealers for sale.**



Drive Chain Slackness



- Chain slackness will have to be adjusted whenever required.
- Std. Chain slackness 20 ~ 30 mm.
- Marking on chain adjusters should be identically positioned on both sides.
- Ensure application of 9 to 11 Kg.m torque to rear axle nut.

Method of O-ring Chain Lubrication

- Put vehicle on side stand & tilt the vehicle to make rear wheel free. Clean the chain by using lint free cloth (If excessive mud / slush found approach Bajaj dealer for proper cleaning).
- Shake the can vigorously by holding vertically upright till the noise of steel ball inside heard uniformly.
- Hold spray can at the back of rear sprocket with extension tube nose at 5~10 cm.
- Rotate the wheel in reverse direction & spray the lube on middle portion of the chain up to full length of the chain.

BRAKE FLUID



Rear Brake
Fluid Reservoir



Front Brake
Fluid Reservoir

FRONT & REAR BRAKE FLUID LEVEL

- Front brake fluid reservoir is located on RH side of Handle bar.
- Rear brake fluid reservoir is located behind RH Step holder.
- To check the brake fluid level, park the vehicle at upright position on level surface. with handle bar in straight ahead condition.
- Always ensure that brake fluid level is above 'MIN' mark given on inspection Window.
- In case of level drop, use only DOT-4 brake fluid (from sealed container) for top up & replacement.

USAGE OF 'LUGGAGE STRAPS' WITH BUNGEE CORD

USAGE OF 'LUGGAGE STRAPS' WITH BUNGEE CORD

If provided, luggage straps below pillion seat, then these straps to be used for bungee cords for clamping luggage on vehicle.

Procedure to use luggage straps :

- Open Pillion seat & take out front and rear luggage straps.(refer photographs A)
- Re-fit pillion seat on its position (B).
- Now you can use luggage straps to hook 'Bungee cord' (not supplied with vehicle) for clamping luggage on vehicle ©. (Maximum allowed luggage load is 15 Kg)

Caution :

Luggage straps can be used only for strapping a luggage bag or similar as shown in the pictures (C & D). The total weight of the bag and its contents shall not exceed 15Kgs.

While using the strap the user shall ensure that necessary precautions are taken in order to ensure that the:



- Luggage / luggage bag is well balanced on the seat and securely tied with help of suitable cord / rope which are strong enough for the purpose.
- Parts of the Vehicle are not damaged due to in appropriate luggage or due to the additional hardware used for securing same.

It is not recommended to use these straps to carry any articles which may damage the vehicle parts or affect the stability of the bike while driving

Warranty is not applicable for any damages arising due to luggage over weight, sharp edges.

When luggage straps are not in use follow below steps.

1. Front straps to be folded with velcro on strap ends & Insert the folded straps under rider seat
2. Rear straps to be folded neatly to approach the hooks & insert straps in hooks.

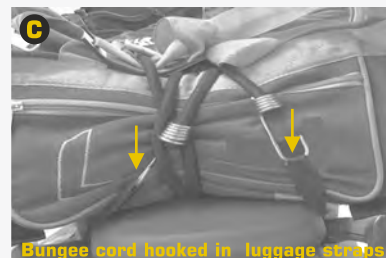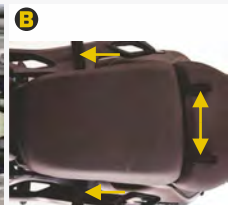

TWIN CHANNEL ABS SYSTEM

Always maintain a safe distance between you and objects ahead. Vehicle speeds should always be reduced during extreme road conditions. The braking distance for motorcycle equipped with an anti-lock braking system may be longer than for those without it on rough road conditions. During these conditions the vehicle should be driven at reduced speeds.

When you apply Front brake / Rear brake under conditions which may lock the wheels, you feel a corresponding sensation (pulsation) in Front brake lever / Rear brake pedal. This is normal and it means ABS is active.

Also it is recommended to use both front & rear brakes simultaneously.

Always slow down when cornering. The anti-lock brake system cannot prevent accidents resulting from excessive speeds.

If the ABS warning light is ON and stays ON, you may have a problem with the ABS. In this case, however, your regular brakes will work normally.

INSTRUCTIONS

Incase, Malfunction indicator, ABS indicator, coolant temperature indicator, low battery & low engine oil pressure indicator glows in speedometer while driving, bring the vehicle to nearest BAL dealership for inspection / repair.

Never drive by disconnecting wheel speed gear cable.

MOBILE CHARGER



Mobile charging socket is provided near Ignition switch as an OE fitment.

The charger socket has been provided with cap to protect charger socket from dust & water entry. Always ensure charger cap is firmly closed on socket when charger socket is not in use.

This charger can be used for charging mobile only in engine running condition.

The mobile charger will supply output voltage only in engine running condition. Customer to use suitable USB cable for mobile charging.



Caution:

- Do not use mobile phone while driving. Momentary lapse in concentration might result in an accident.
- Please ensure charger socket cap is firmly closed on socket while washing of vehicle and in the event of rain.

VEHICLE CLEANING AND WASHING CARE

Regular cleaning not only enhances the appearance of your motorcycle but also plays a crucial role in maintaining its performance and extending its life by preventing rust, corrosion, and premature wear. We recommend following the guidelines below:

Washing Preparation:


- Ensure the engine and all hot components have completely cooled.
- Cover sensitive parts such as the muffler tail end, speedometer, headlamp, tail lamp, Indicators and control switches to prevent water entry and avoid damage or fogging.

Washing Instructions:


- Rinse the vehicle with clean water using a low-pressure spray to remove loose dirt and debris.
- Avoid spraying water directly on electrical, electronic components, the Oil cooler, lights, switches, or the muffler.
- Use a neutral pH bike cleaner; avoid harsh chemicals or household cleaning agents.
- Clean surfaces gently with a sponge or soft brush to prevent scratches.
- Rinse and wipe using a clean microfiber cloth, followed by thorough drying with low air pressure.
- Ensure all electrical connections are clean and moisture-free.
- Lubricate the drive chain and other moving parts after washing and drying.

Important Do's & Don'ts:

- Recommended washing pressure is up to 20 bar; maintain a 2-meter distance and avoid directing the jet at any spot for more than 10 seconds to prevent damage to electrical components like LCDs, LEDs, and other sensitive parts.
- Do not spray water into the air cleaner or throttle body, as it may cause starting issues.
- Avoid removing the seat or any other components during pressure washing to prevent water ingress.
- After washing, gently apply brakes at low speed to dry them; clean brake discs or pads if necessary.
- For matte-painted surfaces, avoid using wax or polish. Instead, clean with mild detergent and a soft cloth.

 **Note :** Headlight lenses may temporarily fog up after washing or riding in the rain. This is normal and does not affect functionality. However, if the moisture/water accumulation is high, please visit the nearest BAL dealer for vehicle inspection.

Following these simple steps will help keep your motorcycle in excellent condition and ensure its reliable performance.

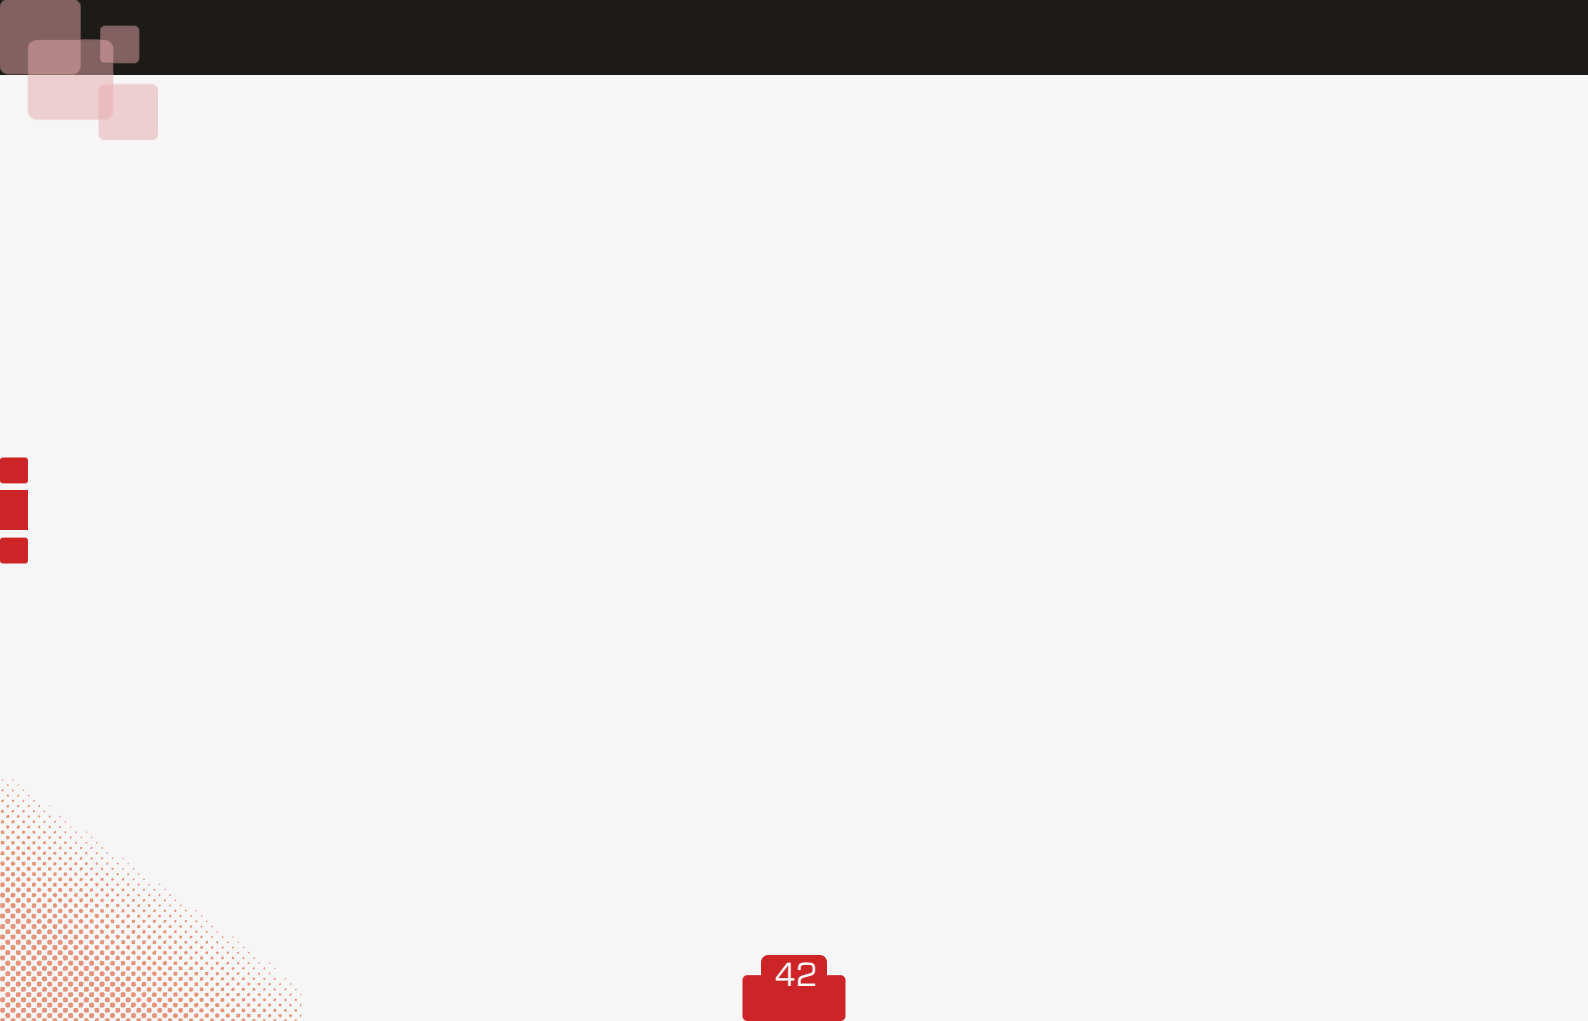

FREE SERVICE GUIDELINES

VEHICLE IS TO BE SERVICED/ REPAIRED AT BAL DEALERSHIP ONLY

Instruction to avail Free Service through Digitized Free Service Coupon

Please follow following procedure : -

- Please provide your mobile number to Dealer at the time of buying of new Bajaj Vehicle.
- In case of change in mobile number, please update to Dealer / ASD.
- When you are at Dealership / ASD workshop for availing Free Service, you will receive the 'Unique Coupon Number' (UCN) through SMS in your mobile.
- Please inform the UCN to Dealer / ASD at the time of Free Service.

(ASD-Authorised Service Dealer)

| Periodic Service Criteria | | | |
|---------------------------|----------------------------|--------------------------------------|--------------------------|
| Service | Days | Kms | |
| 1st Free Service | 30~45 | 500~750 | whichever occurs earlier |
| 2nd Free Service | 240 | 4500~5000 | |
| 3rd Free Service | 360 | 9500~10000 | |
| Subsequent Paid services | 120 Days from last Service | Every 5000 Km after previous service | |

Availing all Free / Paid Services, replacing mandatory periodic parts & engine oil will entitle warranty eligibility.

PERIODIC MAINTENANCE & LUBRICATION CHART

| Sr. No. | Activities / Check points | Recommended frequency - Service interval & Kms | | | | | | | |
|---------|---|--|------------|--------------|---------------|----------------|----------------|----------------|----------------|
| | | Servicing | 1st (Free) | 2nd (Free) | 3rd (Free) | 4th | 5th | 6th | 7th |
| | | KMS | 500 750 | 4500 5000 | 9500 10000 | 14500 15000 | 19500 20000 | 24500 25000 | 29500 30000 |
| 1. | Servicing with water wash | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 2. | Engine oil (Bajaj 10000 oil) | Top-up,R | R | Top-up | R | Top-up | R | Top-up | R |
| 3. | Engine oil Filter | R | R | | R | | R | | R |
| 4. | Engine Oil strainer & Evacuation oil strainer | CL | CL | | CL | | CL | | CL |
| 5. | Air cleaner element** & air filter cover 'O' ring. Drain tube cleaning. | R | | | | | R | | |
| 6. | Spark plug clean & check gap | CL,A, R | | | CL,A | | CL,A | | R |
| 7. | Valve tappet clearance | C, A | | | | | C, A | | |
| 8. | Throttle body rubber duct (Sleeve) for hard resulting in loose fitment. | C,R | | | | C,R | C,R | C,R | C,R |
| 9. | Engine breather tube for cracks. | C,R | | | C,R | C,R | C,R | C,R | C,R |
| 10. | SAI, EVAP system Hoses- check for cracks | C,R | | C,R | C,R | C,R | C,R | C,R | C,R |
| 11. | Radiator fins | C,R | | C,R | C,R | C,R | C,R | C,R | C,R |

PERIODIC MAINTENANCE & LUBRICATION CHART

| Recommended frequency - Service interval & Kms | | | | | | | | | Remarks |
|--|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|---|
| 8th | 9th | 10th | 11th | 12th | 13th | 14th | 15th | 16th | |
| 34500 35000 | 39500 40000 | 44500 45000 | 49500 50000 | 54500 55000 | 59500 60000 | 64500 65000 | 69500 70000 | 74500 75000 | |
| ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | Ensure to prevent water entry in Petrol tank, Silencer & electrical parts. Use caustic free solution for washing. |
| Top-up | R | Top-up | R | Top-up | R | Top-up | R | Top-up | Use BGO 10W50 BS6. Oil level window cleaning at every 10,000 km by petrol spray & nylon brush |
| | R | | R | | R | | R | | Replace oil filter in 1st service & at every 10,000 km. |
| | CL | | CL | | CL | | CL | | Oil strainer cleaning at the time of oil change. |
| | R | | | | R | | | | Replace viscous filter at every 20,000 km. Air filter cleaning not required Drain tube to be cleaned at every 10,000 km. |
| | CL,A | | CL,A | | R | | CL,A | | Replace at every 30,000 km. |
| | C, A | | | | C, A | | | | Check & adjust at every 20,000 km. |
| C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | Replace if required |
| C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | Replace if required |
| C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | Replace if found cut / damaged |
| C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | If found damaged, replace it |

PERIODIC MAINTENANCE & LUBRICATION CHART

| Sr. No. | Activities / Check points | Recommended frequency - Service interval & Kms | | | | | | | |
|---------|---|---|------------|--------------|---------------|----------------|----------------|----------------|----------------|
| | | Servicing | 1st (Free) | 2nd (Free) | 3rd (Free) | 4th | 5th | 6th | 7th |
| | | KMS | 500 750 | 4500 5000 | 9500 10000 | 14500 15000 | 19500 20000 | 24500 25000 | 29500 30000 |
| 12. | Check Coolant level in expansion tank / Hose clamp adjustment | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |
| 13. | Coolant & Radiator hoses | Replacement at every 30000 Kms or 3 year (whichever occurs earlier) | | | | | | | |
| 14. | Silencer drain hole cleaning | CL | | | CL | CL | CL | CL | CL |
| 15. | Water Pump seals | R | | | | | | | |
| 16. | Wiring harness connections, routine & Conduit / PVC sleeve inspection. | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T |
| 17. | Battery, connections & health by load tester. +ve terminal cap fitment. | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T |
| 18. | Ignition switch contacts cleaning | CL,L | | | CL,L | CL,L | CL,L | CL,L | CL,L |
| 19. | HT coil connections | C,T | | C,T | C,T | C,T | C,T | C,T | C,T |
| 20. | Starter motor & starter relay connections | C,T | | C,T | C,T | C,T | C,T | C,T | C,T |
| 21. | Oil pressure indicator check on console post ignition ON. | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R |
| 22. | Check fault code, Clear fault history, Update latest hex file if applicable | C | C | C | C | C | C | C | C |
| 23. | sealed Drive chain wear**- Clean, Lubricate & adjust. Replace if required | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A |

PERIODIC MAINTENANCE & LUBRICATION CHART

| Recommended frequency - Service interval & Kms | | | | | | | | | Remarks |
|---|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|---|
| 8th | 9th | 10th | 11th | 12th | 13th | 14th | 15th | 16th | |
| 34500 35000 | 39500 40000 | 44500 45000 | 49500 50000 | 54500 55000 | 59500 60000 | 64500 65000 | 69500 70000 | 74500 75000 | |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | Coolant top up if required. Use BAJAJ Koolex coolant only |
| Replacement at every 30000 Kms or 3 year (whichever occurs earlier) | | | | | | | | | |
| CL | CL | CL | CL | CL | CL | CL | CL | CL | |
| | R | | | | | | | | Replace at every 40,000 km. |
| C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | Damaged conduit / PVC sleeves protection by applying electrical tape film |
| C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | C,A,L,T | Apply petroleum jelly on battery terminals. Use midtronics battery tester |
| CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | Use recommended WD40 spray |
| C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | |
| C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | |
| C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | Icon should disappear post engine ON. After 4,000 rpm, no icon should be displayed. |
| C | C | C | C | C | C | C | C | C | |
| CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | During 1st free service use OKS spray for chain cleaning without removing chain from vehicle. •During other services clean chain with Diesel+SAE 90 oil ratio of 50:50 & lubricate by SAE 90 oil.(Customer to use OKS chain lub spray at every 500 km.) |

PERIODIC MAINTENANCE & LUBRICATION CHART

| Sr. No. | Activities / Check points | Recommended frequency - Service interval & Kms | | | | | | | |
|---------|--|--|------------|--------------|---------------|----------------|----------------|----------------|----------------|
| | | Servicing | 1st (Free) | 2nd (Free) | 3rd (Free) | 4th | 5th | 6th | 7th |
| | | KMS | 500 750 | 4500 5000 | 9500 10000 | 14500 15000 | 19500 20000 | 24500 25000 | 29500 30000 |
| 24. | Side stand pivot pin | C,L | | | | | C,L | | |
| 25. | Steering play | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |
| 26. | Steering stem bearing & Cap steering bearing (Plastic)** | C,CL,L | | | C,CL,L | | C,CL,L | | C,CL,L |
| 27. | Front fork oil & seal | C,R | C,R | C,R | C,R | C,R | C,R | C,R | R |
| 28. | Step-pillion LH & RH (Ball & Plate) | CL,L | | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L |
| 29. | Swing arm NRB for more play | L | | | | | | | |
| 30. | Brake pads Front & Rear for wear limit. | C,R | C,R | C,R | C,R | R | C,R | C,R | R |
| 31. | Check source of leakages if any in the brake system. Check Front & rear brake hose condition. Check Brake fluid level and top up, if needed. | C,A,R | C,A,R | C,A,R | C,A,R | C,A,R | C,A,R | C,A,R | R |
| 32. | Rear sprocket fasteners for looseness. | C,T | C,T | | C,T | | C,T | | C,T |
| 33. | Rear wheel rubber shock dampers for excess play. | C,R | | | C,R | | C,R | | C,R |
| 34. | Fairing & windshield well nuts for rubber cracks | C,R | | | C,R | C,R | C,R | C,R | C,R |
| 35. | Clutch & Throttle cable free play | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |
| 36. | Head light focus adjustment | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |

PERIODIC MAINTENANCE & LUBRICATION CHART

| Recommended frequency - Service interval & Kms | | | | | | | | | Remarks |
|--|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|---|
| 8th | 9th | 10th | 11th | 12th | 13th | 14th | 15th | 16th | |
| 34500 35000 | 39500 40000 | 44500 45000 | 49500 50000 | 54500 55000 | 59500 60000 | 64500 65000 | 69500 70000 | 74500 75000 | |
| | C,L | | | | C,L | | | | Use recommended Limaplex HTX3 grease. |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | |
| | C,CL,L | | C,CL,L | | C,CL,L | | C,CL,L | | Replace if required. Use Limaplex grease for lubrication |
| C,R | C,R | C,R | C,R | C,R | R | C,R | C,R | C,R | Replace oil and oil seal and dust seal in pair at every 30,000 km. |
| CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | CL,L | Replace ball & plate, if required. |
| | L | | | | | | | | Lubricate NRB at every 40,000 km. Use AP grease. |
| C,R | C,R | R | C,R | C,R | R | C,R | C,R | R | Replace at every 15,000 km. |
| C,A,R | C,A,R | C,A,R | C,A,R | C,A,R | R | C,A,R | C,A,R | C,A,R | Check & Top up DOT 4 brake oil in every service. Replace DOT 4 brake oil & Master / Caliper seals at every 30,000 km. |
| | C,T | | C,T | | C,T | | C,T | | Use model wise torque values. |
| | C,R | | C,R | | C,R | | C,R | | Replace rear wheel rubber shock damper if required |
| C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | Replace if rubber found hard |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | Replace cables if operation found hard. |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | |

PERIODIC MAINTENANCE & LUBRICATION CHART

| Sr. No. | Activities / Check points | Recommended frequency - Service interval & Kms | | | | | | | |
|---------|---|--|------------|--------------|---------------|----------------|----------------|----------------|----------------|
| | | Servicing | 1st (Free) | 2nd (Free) | 3rd (Free) | 4th | 5th | 6th | 7th |
| | | KMS | 500 750 | 4500 5000 | 9500 10000 | 14500 15000 | 19500 20000 | 24500 25000 | 29500 30000 |
| 37. | Check & confirm all bulbs / switches working. | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |
| 38. | General lubrication – Clutch lever | L | L | L | L | L | L | L | L |
| 39. | Tyre air pressure. | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |
| 40. | Mirror position & joint firmness. | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A |
| 41. | USB socket charger | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R |
| 42. | All fasteners tightness, | C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T |
| | 1.Front & rear axle | | | | | | | | |
| | 2.Swing arm axle | | | | | | | | |
| | 3.Engine foundation | | | | | | | | |
| | 4.Rider foot rest | | | | | | | | |
| | 5.Pillion stay | | | | | | | | |

*It is strongly recommended to use only Bajaj genuine oil.

C: Check, A: Adjust, CL: Clean, R: Replace, T: Tighten, L: Lubricate

FOLLOWING ITEMS ARE CHARGEABLE TO CUSTOMER.

Oil, Coolant, Filters, All types of greases, Cleaning agents, Cables, Wear & tear parts, Rubber O rings/oil seals/pipes, Gaskets etc.

PERIODIC MAINTENANCE & LUBRICATION CHART

| Recommended frequency - Service interval & Kms | | | | | | | | | Remarks |
|--|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|---|
| 8th | 9th | 10th | 11th | 12th | 13th | 14th | 15th | 16th | |
| 34500 35000 | 39500 40000 | 44500 45000 | 49500 50000 | 54500 55000 | 59500 60000 | 64500 65000 | 69500 70000 | 74500 75000 | |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | If found sticky then use recommended WD40 spray |
| L | L | L | L | L | L | L | L | L | Use recommended AP grease. |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | Ensure tyre air pressure as per specification. |
| C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | |
| C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | C,R | Charging OK to be checked at engine start condition using LED USB light |
| C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | Use model wise torque values. |

NON-USE MAINTENANCE

Non-use maintenance is necessary if a vehicle remains off road for a longer duration (more than 15 days**). The correct and careful non-use maintenance carried out before storing the vehicle will prevent the vehicle from rusting and from such other non-operational damages like fire hazards.

- Clean the entire vehicle thoroughly.
- Empty the fuel from the fuel tank and (if fuel is left in for a longer time, the fuel will break and gummy substance could clog the Throttle Body).
- Remove spark plug & put several drops of Engine oil into the cylinder. Self start engine over slowly a few times to coat cylinder wall with oil & install back spark plug.
- Set the vehicle on a box or a stand so that both wheels are raised off the ground.
- Spray oil on all unpainted metal surfaces to prevent rusting. Avoid getting oil on rubber parts or brake liners.
- Cover entire vehicle neatly. Make sure that storage area is well ventilated & free from any source of flames or spark.

- Fill 10% excess air pressure in both wheels.
- Do not apply oil on front brake disc, to prevent rusting. If the front brake disc rusts during storage, do not attempt to clean it with soap water. The rust will go off automatically during first few application of brake.

**** For Battery**

- a.Remove battery and keep it on wooden plank, in properly ventilated area.
 - b.Before taking the vehicle for use.
- Get the battery recharged from the Authorised Service Center / Battery Dealer.
 - Apply petroleum jelly on terminals. (applicable to certain models).

Preparation for regular use after storage

- Clean the vehicle
- Make sure the spark plug is tight.
- Fill the fuel tank with fuel.
- Change the engine oil.
- Check all the points listed in the Daily Safety Checks section.
- Check and inflate tyres to proper tyre pressure.

DELIVERY CERTIFICATE

FRAME NO.

[illegible]

ENGINE NO.

| | | | | | | | | | | |
|--|--|--|---|--|--|---|--|---|--|--|
| | | | - | | | - | | : | | |
|--|--|--|---|--|--|---|--|---|--|--|

Sold on.:

Customer's Name Mr/Mrs/Miss:

Address: _____ Contact No.: _____

I have taken possession of motorcycle along with the following items.

- | | |
|-------------------|---|
| 1. Owner's Manual | 5. Standard Accessories |
| 2. 2 nos of key | 6. Battery Make _____ Sr. No. _____ |
| 3. Set of tools | 7. Tyre Fr Make _____ Sr. No. _____ |
| 4. First Aid Kit | Rr Make _____ Sr. No. _____ |

The Vehicle has been delivered to my satisfaction & I have understood all terms and conditions of warranty, service schedules & maintenance tips and shall abide by them.

Customer's Signature

(To be filled in by the dealer)

Imp: "Do not detach this page from Owner's Manual"

Dealer Code :

Dealer Name :

Address :

Contact No. :

WARRANTY : SCOPE & LIMITS

Bajaj Auto Limited provides the following warranty in respect of the **"Dominar 250 BS VI"** motorcycle manufactured by us.

Every possible care and precaution has been taken to ensure quality in respect of the material & workmanship in the vehicles manufactured by us. Bajaj Auto Limited will repair or replace at their Authorised Workshops, free of charge, part or parts there of as may be found, on examination, to have manufacturing defect within a period of 5 Years or 75,000 Kms., whichever is earlier from the date of sale subject to fulfillment of conditions stipulated in part A, B & C given here under

Note : Warranty is applicable for only first owner of vehicle.

Part A:

Warranty claims in respect of such items like shock absorbers, speedometers etc. though claimed through us, are subject to acceptance of the respective manufacturers. In all such cases the decision of the respective manufacturer will be final and binding.

Proprietary parts like tyres, tubes and battery are warranted by their respective manufacturers and should be claimed on them directly by the customer. Bajaj Auto Limited shall not be Liable to replace them though their dealer, however Bajaj Dealers will provide full assistance

in referring such claims with respective manufacturer.

Bajaj Auto Limited undertake no liability in the matter of consequential loss or damage caused due to the failure of the parts. Delay, if any, at the repairing workshop in carrying out repair to vehicle shall not be a ground for extending the warranty period, nor shall it give any right to the customer for claiming any compensation for damages.

Bajaj Auto Limited reserves the right either to repair or replace the defective parts.

Where a defective part can be replaced by part/s of alternative brand/s, which are normally used by Bajaj Auto Limited in the course of manufacture, Bajaj Auto Limited reserves the right to carry out the replacement by a part or parts of any such alternative brand/s.

This warranty and any claim arising there, is subject to Pune jurisdiction only.

Part B:

No claim for exchange or repair can be considered unless the customer :

- a. Ensures that immediately upon detection of the defect, he approaches any nearest Authorised Bajaj Vehicle Dealers & Recommended Authorised Service Dealers with the concerned vehicle and enables him to remove and despatch the part / parts attributing to the manufacturing defect to the Company.

WARRANTY : SCOPE & LIMITS

b. Produces the Owner's Manual, in original, to enable that dealer to verify the details.

It must be expressly understood that claims forwarded directly to us by the owner / customer will not be entertained at all and such defective part/parts thus forwarded by them will lie at our factory at their own risk, and this warranty shall not be enforceable.

To avail benefits of warranty, following are mandatory

1. Availing of Initial 3 Free Services without lapse.
2. Availing paid services at subsequent 5000 kms. or 120 days from last service whichever is earlier without any lapse.
3. Availing of all services at the Authorised Vehicle Dealers & Recommended Authorised Service Dealers.
4. Usage of only recommended engine oil
"Bajaj 10000 10W50" at specified frequency for drain interval of 10,000 kms. & engine oil level top-up at 5000 kms.
5. Replacing mandatory periodic parts such as air filter, oil filter etc. as per periodic maintenance schedule.

Part C :

Further this warranty is NOT applicable to :

1. Normal maintenance operations like brake & clutch adjustments, cleaning of fuel system, engine tune-up or such other adjustments.
2. Parts subjected to normal wear & tear like Clutch Plates, Brake Shoes, Chain, Sprockets, Fork Oil Seal, Spark Plug, Control Cables, Brake Pads.
3. Replacement of bulbs & rubber components like grommets, 'O' rings, bellows as well as filters, packings, gaskets, fasteners etc.
4. Painted parts. Only blistering or peeling off of paint film are covered under warranty. Any defect arising out due to external damages or due to usage of protective covers /additional protective coatings adverse atmospheric conditions etc. are not allowed like under warranty.
5. All consumables like Engine oil, Fork oil, Brake Oil, Grease etc. are chargeable to customer.
6. Any defect arising due to above consumables not changed as per scheduled or if used other than the recommended one.
7. Never drive your bike through flooded roads or a flooded patch, as damages to the engine parts due to water entry is not covered under warranty.

WARRANTY : SCOPE & LIMITS

8. All chrome plated parts are prone to rust or corrosion in coastal area or in acidic environment or due to neglected cleaning etc. However chrome film peeling is covered under warranty in general atmospheric conditions. Blue/ Yellow colouration of silencer near exhaust port is permissible and hence not covered under warranty.
 9. Oxidation of unpainted/painted crankcase, cylinder block, cylinder head etc. in acidic environment or in a coastal area.
 10. Parts of the vehicle that have been subjected to misuse, accident, negligent treatment OR which have been used in conjunction with parts & an equipment not manufactured or recommended for use by Bajaj Auto Limited, if found is the sole judgement of Bajaj Auto Limited, such use prematurely affects the performance and reliability of the vehicle.
 11. Parts of the vehicle that have been altered and modified or replaced in unauthorized manner like use of wider tyres, loud silencers etc and which in the sole judgement of the Bajaj Auto Limited affects its performance and reliability.
 12. **Vehicles which are not being serviced at recommended dealers as per the service schedule described or which have not been operated or maintained in accordance with the instructions maintained in the Owner's Manual.**
 13. Vehicles used for any competition or race and/or for attempting to set up any kind of record.
 14. Any failure arising due to use of adulterated or bad quality fuel.
Parts affected due to bad fuel quality are not covered Under warranty.
 15. If additional electrical accessories such as - Remote, Bigger horn, Musical brake light etc. fitted on vehicle.
 16. If the vehicle has been used for commercial purpose like Taxi or any other means of commercial transportation.
- Bajaj Auto Limited reserves the right to make any changes in design or to add any improvements on the vehicle at any time without incurring any obligation to install the same on a vehicle previously supplied and sold. Also, the conditions of this warranty are subject to alteration without any notice.
- This warranty is the entire written warranty given by Bajaj Auto Limited for **"Dominar 250 BS VI"** motorcycle' and no other dealer or its or his agent or employee is authorised to extend or enlarge this warranty.

BATTERY WARRANTY CARD

MAKE OF BATTERY : _____ MFG. CODE OF BATTERY: _____

BATTERY SR. NO.: BATTERY CHARGING DATE:

TYPE OF BATTERY: _____ VEHICLE SALE DATE: _____

NAME OF OWNER AND ADDRESS: _____

TYPE OF VEHICLE: _____ REG. NO.: _____

FRAME NO.: _____ ENGINE NO.: _____

SERVICE RECORD

| Sr. No. | Date | Age Mths. | Voltage | Remarks | Dealer's Stamp & Signature | * Code |
|---------|------|-----------|---------|---------|----------------------------|--------|
| 1. | | | | | | |
| 2. | | | | | | |
| 3. | | | | | | |
| 4. | | | | | | |
| 5. | | | | | | |
| 6. | | | | | | |

*Code For Remarks:

AE : Electrical system needs attention.

IR : Insufficient running of vehicle.

CB : Cover broken.

BC : Broken Container.

PM : Poor maintenance.

BA : Battery abused.

NOTE

Customer should insist that "Service Record" must be filled by respective authorised battery dealer as proof of specified maintenance for easy settlement of claim, if any.

TO BE FILLED IN BY BATTERY DEALERS / DISTRIBUTORS IN CASE OF CLAIM

Name of Dealer & Code: _____

Date of claim: _____ Battery Type : _____

Serial No.: _____ Date of Fitment: _____

Failure Mode (Please tick as applicable)

- Loose connection
- Overcharge / Undercharge
- Internal Short
- Reverse Charge
- Plate Shedding
- Does not Hold Charge
- Wrong Assembly
- Left Lying Idle
- Wrong Application
- Terminal Corroded

Claim Accepted

Claim Rejected

Details of Repair, if any _____

NOTE


Please contact nearest respective authorised battery dealer for details immediately after purchase of vehicle.

4T
Premium
Engine Oil




LONGEST ENGINE OIL CHANGE INTERVAL OF 10,000* KM

Synthetic Engine Oil Ultimate Performance



Reduced
Friction



Clean Engine
Parts



Smooth
Clutch Control



*Top up recommended at 5000 km.



Top up bottle



Always Use Bajaj Genuine Parts & High Performance Engine Oils

We are committed to provide the best of sales & service experience, however should you require any additional assistance, please call our Call centre on the number given below.



:7219821111

Call charges are as applicable

**Call centre timings :- Monday to Sunday
(09 : 00 am - 08 : 00 pm)**



Please download customer care app from '**Google play store**' and '**Apple store**' and book the vehicles for servicing and more on your phone.

E-mail : customerservice@bajajauto.co.in

Web Site : www.bajajauto.com

CIN : L65993PN2007PLC130076